

COMPONENT	MODEL 123						MODEL 116				MODEL 107	
	240D	280E	280CE	300D	300CD	300TD	280SE	300SD	450SEL	6.9	450SL	450SLC
Alternator	1-2C, 12	1-2C, 13	1-2C, 13	1-2C, 12	1-2C, 12	1-2C, 12	2-1C	2-1C	2-1C	2-1C	3-2C	3-2C
Ambient Temperature Sensor	—	4	4	4	4	4	4	4	4	4	4	4
Automatic Transmission Solenoid Valve	1-13F	1-13F	1-13F	1-13F	1-13F	1-13F	2-14H	2-14H	2-14H	2-14H	3-15E	3-15E
Battery	1-3D, 12	1-3D, 13	1-3D, 13	1-3D, 12	1-3D, 12	1-3D, 12	2-3D	2-3D	2-3D	2-3D	3-15E	3-15E
Bi-Level Flap Valve	—	4	4	4	4	4	4	4	4	4	4	4
Brake Wear Sensor; front left	1-9L	1-9L	1-9L	1-9L	1-9L	1-9L	2-12M	2-12M	2-12M	2-12M	3-11L	3-11L
Brake Wear Sensor; front right	1-9L	1-9L	1-9L	1-9L	1-9L	1-9L	2-12M	2-12M	2-12M	2-12M	3-11L	3-11L
Cigar Lighter	1-29E	1-29E	1-29E	1-29E	1-29E	1-29E	2-9G	2-9G	2-9G	2-9G	3-35H	3-35H
Climate Control Amplifier	—	4	4	4	4	4	4	4	4	4	4	4
Climate Control Unit	—	4	4	4	4	4	4	4	4	4	4	4
Clock	1-20C	1-20C	1-20C	1-20C	1-20C	1-20C	2-20K	2-20K	2-20K	2-20K	3-24J	3-24J
Cold Start Valve	—	13	13	—	—	—	2-4E	—	2-4E	2-4E	3-6E	3-6E
Coolant Temperature Sensor	1-13L	1-13L	1-13L	1-13L	1-13L	1-13L	2-14L	2-14L	2-14L	2-14L	3-13L	3-13L
Cruise Control Actuator	6	6	6	6	6	6	6	6	6	6	6	6
Cruise Control Amplifier	6	6	6	6	6	6	6	6	6	6	6	6
Diagnostic Plug	—	13	13	—	—	—	2-7H	2-7H	2-7H	2-7H	3-7H	3-7H
Distributor	—	13	13	—	—	—	2-4J	—	2-6J	2-6J	3-6J	3-6J
Engine Temperature Sensor	12	—	—	12	12	12	—	—	—	—	—	—
Enrichment Compensation Heater	—	13	13	—	—	—	2-7E	—	2-7E	2-7E	—	—
Flasher	—	—	—	—	—	—	2-20D	2-20D	2-20D	2-20D	—	—
Fuel Gauge	1-10J	1-10J	1-10J	1-10J	1-10J	1-10J	2-14K	2-14K	2-14K	2-14K	3-14J	3-14J
Fuel Tank Sensor	1-10L	1-10L	1-10L	1-10L	1-10L	1-10L	2-14L	2-14L	2-14L	2-14L	3-14L	3-14L
Fuses:												
Climate Control Amplifier; in-line	—	4	4	4	4	4	4	4	4	4	4	4
Glow Plug; in-line	12	—	—	12	12	12	—	—	—	—	—	—
Main Fuse Box	1-11C,23A, 23G,29C,8	1-11C,23A, 23G,29C,8	1-11C,23A, 23G,29C,8	1-11C,23A, 23G,29C,8	1-11C,23A, 23G,29C,8	1-11C,23A, 23G,29C,8	2-15B,31G, 35B,8	2-15B,31G, 35B,8	2-15B,31G, 35B,8	2-15B,31G, 35B,8	3-16A,29F, 35F,8	3-16A,29F, 35F,8
Radio; in-line	1-30E	1-30E	1-30E	1-30E	1-30E	1-30E	2-10F	2-10F	2-10F	2-10F	—	—
Seat Heaters Fuse Box	9	9	9	9	9	9	9	9	9	9	9	9
Gauges:												
Fuel	1-10J	1-10J	1-10J	1-10J	1-10J	1-10J	2-14K	2-14K	2-14K	2-14K	3-14J	3-14J
Tachometer	—	—	—	—	—	—	2-15K	2-15K	2-15K	2-15K	3-18J	3-18J
Temperature	1-14J	1-14J	1-14J	1-14J	1-14J	1-14J	2-15K	2-15K	2-15K	2-15K	3-13J	3-13J
Glow Plug Resistors	12	—	—	12	12	12	—	—	—	—	—	—
Glow Plugs	12	—	—	12	12	12	—	—	—	—	—	—
Glow Plug Timer	12	—	—	12	12	12	—	—	—	—	—	—
Hazard/Flasher Timer Assembly	1-18H	1-18H	1-18H	1-18H	1-18H	1-18H	—	—	—	—	3-19D	3-19D
Heating Coil	—	—	—	—	—	—	—	—	—	—	3-5B	3-5B
Horns	1-11D	1-11D	1-11D	1-11D	1-11D	1-11D	2-36D	2-36D	2-36D	2-36D	3-22B	3-22B
Ignition Coil	—	13	13	—	—	—	2-5H	2-5H	2-5H	2-5H	3-5H	3-5H
In-Car Temperature Sensor	—	4	4	4	4	4	4	4	4	4	4	4
Instrument Panel	1-10J,20C, 25H	1-10J,20C, 25H	1-10J,20C, 25H	1-10J,20C, 25H	1-10J,20C, 25H	1-10J,20C, 25H	2-18K,34H	2-18K,34H	2-18K,34H	2-18K,34H	3-18J,32J	3-18J,32J
Instrument Panel Lamp Rheostat	1-14J	1-14J	1-14J	1-14J	1-14J	1-14J	2-26J	2-26J	2-26J	2-26J	3-25J	3-25J
Interval Wiper Control Unit	1-26H	1-26H	1-26H	1-26H	1-26H	1-26H	2-35H	2-35H	2-35H	2-35H	3-33H	3-33H

COMPONENT INDEX

COMPONENT	MODEL 123						MODEL 116			MODEL 107	
	240D	280E	280CE	300D	300CD	300TD	280SE	300SD	450SEL	450SL	450SLC
Lamps:											
Back-Up; left	1-12F	1-12F	1-12F	1-12F	1-12F	1-11F	2-13H	2-13H	2-13H	3-15E	3-15E
Back-Up; right	1-13F	1-13F	1-13F	1-13F	1-13F	1-12F	2-14H	2-14H	2-14H	3-16E	3-16E
Blower Switch	1-16K	—	—	—	—	—	—	—	—	—	—
Brake Warning Indicator	1-9J	1-9J	1-9J	1-9J	1-9J	1-9J	2-13K	2-13K	2-13K	3-13J	3-13J
Brake Wear Indicator	1-9J	1-9J	1-9J	1-9J	1-9J	1-9J	2-12K	2-12K	2-12K	3-11J	3-11J
Charge Indicator	1-7J	1-7J	1-7J	1-7J	1-7J	1-7J	2-11K	2-11K	2-11K	3-9J	3-9J
Cigar Lighter	1-29E	1-29E	1-29E	1-29E	1-29E	1-29E	2-9G	2-9G	2-9G	3-35H	3-35H
Climate Control Panel	—	1-17M	1-17M	1-17M	1-17M	1-17M	2-22H	2-22H	2-22H	3-21D	3-21D
Dome; front	1-12H	1-12H	1-12H	1-12H	1-12H	1-12H	2-21D	2-21D	2-21D	—	3-24C
Dome; left	—	—	—	—	—	—	—	—	—	3-26E	—
Dome; rear	1-24D	1-24D	1-24D	1-24D	1-24D	1-25B	2-24E	2-24E	2-24E	—	3-23F
Dome; right	—	—	—	—	—	—	—	—	—	3-27E	—
Door; left	—	—	—	—	—	—	—	—	—	3-24E	3-24E
Door; right	—	—	—	—	—	—	—	—	—	3-25E	3-25E
Fasten Seat Belt	1-11J	1-11J	1-11J	1-11J	1-11J	1-11J	2-16K	2-16K	2-16K	3-11J	3-11J
Fog; left	1-23K	1-23K	1-23K	1-23K	1-23K	1-23K	2-31K	2-31K	2-31K	3-30L	3-30L
Fog; right	1-23K	1-23K	1-23K	1-23K	1-23K	1-23K	2-32K	2-32K	2-32K	3-30L	3-30L
Gearshift	1-17F	1-17F	1-17F	1-17F	1-17F	1-17F	2-27E	2-27E	2-27E	3-27J	3-27J
Glove Box	1-31D	1-31D	1-31D	1-31D	1-31D	1-31D	2-11F	2-11F	2-11F	3-36G	3-36G
Hazard Indicator	1-18H	1-18H	1-18H	1-18H	1-18H	1-18H	2-18E	2-18E	2-18E	3-20D	3-20D
Headlamp; high, left	—	—	—	—	—	—	2-33K	2-33K	2-33K	3-31L	3-31L
Headlamp; high, right	—	—	—	—	—	—	2-34K	2-34K	2-34K	3-32L	3-32L
Headlamp; high/low, left	1-25K	1-25K	1-25K	1-25K	1-25K	1-25K	2-32K	2-32K	2-32K	3-31L	3-31L
Headlamp; high/low, right	1-24K	1-24K	1-24K	1-24K	1-24K	1-24K	2-33K	2-33K	2-33K	3-32L	3-32L
Heated Rear Window	5	5	5	5	5	5	5	5	5	5	5
Heater Control Illumination	1-15K	—	—	—	—	—	—	—	—	—	—
High Beam Indicator	1-25H	1-25H	1-25H	1-25H	1-25H	1-25H	2-33H	2-33H	2-33H	3-32J	3-32J
Instrument Panel	1-14J	1-14J	1-14J	1-14J	1-14J	1-14J	2-25K	2-25K	2-25K	3-35J	3-35J
License Plate; left	1-18F	1-18F	1-18F	1-18F	1-18F	1-20F	2-27K	2-27K	2-27K	3-25L	3-25L
License Plate; right	1-19F	1-19F	1-19F	1-19F	1-19F	1-20F	2-27K	2-27K	2-27K	3-26L	3-26L
Low Fuel Indicator	1-10J	1-10J	1-10J	1-10J	1-10J	1-10J	2-14K	2-14K	2-14K	3-14J	3-14J
Marker; front, left	—	—	—	—	—	—	—	—	—	3-27L	3-27L
Marker; front, right	—	—	—	—	—	—	—	—	—	3-27L	3-27L
Marker; rear, left	1-19F	1-19F	1-19F	1-19F	1-19F	1-19F	2-28K	2-28K	2-28K	3-25L	3-25L
Marker; rear, right	1-20F	1-20F	1-20F	1-20F	1-20F	1-20F	2-29K	2-29K	2-29K	3-26L	3-26L
Parking; front, left	1-22K	1-22K	1-22K	1-22K	1-22K	1-22K	2-31K	2-31K	2-31K	3-29L	3-29L
Parking; front, right	1-21K	1-21K	1-21K	1-21K	1-21K	1-21K	2-29K	2-29K	2-29K	3-28L	3-28L
Preglow Indicator	12	—	—	12	12	12	—	—	—	—	—
Reading; left	—	—	—	—	—	—	2-25E	2-25E	2-25E	—	—
Reading; right	—	—	—	—	—	—	2-23E	2-23E	2-23E	—	—

COMPONENT INDEX

COMPONENT	MODEL 123						MODEL 116			MODEL 107	
	240D	280E	280CE	300D	300CD	300TD	280SE	300SD	450SEL	450SL	450SLC
Lamps (con't) :											
Seat Heater; front, left	9	9	9	9	9	9	9	9	9	9	9
Seat Heater; front, right	9	9	9	9	9	9	9	9	9	9	9
Seat Heater; rear, left	-	-	-	-	-	-	9	9	9	-	-
Seat Heater; rear, right	-	-	-	-	-	-	9	9	9	-	-
Stop; left	1-14F	1-14F	1-14F	1-14F	1-14F	1-14F	2-12H	2-12H	2-12H	3-16E	3-16E
Stop; right	1-15F	1-15F	1-15F	1-15F	1-15F	1-15F	2-12H	2-12H	2-12H	3-17E	3-17E
Suspension Warning Indicator	-	-	-	-	-	-	-	-	-	-	-
Tail; left	1-22K	1-22K	1-22K	1-22K	1-22K	1-22K	2-30K	2-30K	2-30K	3-29L	3-29L
Tail; right	1-21K	1-21K	1-21K	1-21K	1-21K	1-21K	2-30K	2-30K	2-30K	3-28L	3-28L
Temperature Vacuum Switch	1-18F	-	-	-	-	-	-	-	-	-	-
Trunk	1-19C	1-19C	1-19C	1-19C	1-19C	1-19C	2-25E	2-25E	2-25E	3-22E	3-22E
Turn Signal Indicator; left	1-18K	1-18K	1-18K	1-18K	1-18K	1-18K	2-18K	2-18K	2-18K	3-19J	3-19J
Turn Signal Indicator; right	1-18K	1-18K	1-18K	1-18K	1-18K	1-18K	2-18K	2-18K	2-18K	3-22J	3-22J
Turn Signal; front, left	1-17K	1-17K	1-17K	1-17K	1-17K	1-17K	2-17G	2-17G	2-17G	3-19H	3-19H
Turn Signal; front, right	1-19K	1-19K	1-19K	1-19K	1-19K	1-19K	2-18G	2-18G	2-18G	3-21H	3-21H
Turn Signal; rear, left	1-18K	1-18K	1-18K	1-18K	1-18K	1-18K	2-17G	2-17G	2-17G	3-20H	3-20H
Turn Signal; rear, right	1-19K	1-19K	1-19K	1-19K	1-19K	1-19K	2-17G	2-17G	2-17G	3-20H	3-20H
Motors:											
Antenna	7	7	7	7	7	7	7	7	7	7	7
Auxiliary Fan	11	4	4	4	4	4	4	4	4	4	4
Auxiliary Water Pump	-	4	4	4	4	4	4	4	4	4	4
Blower	11	4	4	4	4	4	4	4	4	4	4
Fuel Pump	-	13	13	-	-	-	2-7E	-	2-7E	3-5B	3-5B
Servo Assembly	-	4	4	4	4	4	4	4	4	4	4
Sliding Roof	10	10	10	10	10	10	10	10	10	10	10
Starter	1-4C,12	1-4C,13	1-4C,13	1-4C,12	1-4C,12	1-4C,12	2-4C	2-4C	2-4C	3-4C	3-4C
Washer Pump; rear door	-	-	-	-	-	1-29J	-	-	-	-	-
Window; front, left	8	8	8	8	8	8	8	8	8	8	8
Window; front, right	8	8	8	8	8	8	8	8	8	8	8
Window; rear, left	8	8	8	8	8	8	8	8	8	8	8
Window; rear, right	8	8	8	8	8	8	8	8	8	8	8
Windshield Washer	1-27G	1-27G	1-27G	1-27G	1-27G	1-27G	2-36G	2-36G	2-36G	3-34G	3-34G
Windshield Wiper	1-25K	1-25K	1-25K	1-25K	1-25K	1-25K	2-34J	2-34J	2-34J	3-33L	3-33L
Wiper; rear door	-	-	-	-	-	1-29L	-	-	-	-	-
Overload Protection Device Switching Unit	-	-	-	-	-	-	2-14E	-	-	-	-
Preglow Indicator Temperature Sender	-	-	-	-	-	-	14	-	-	-	-

COMPONENT INDEX

COMPONENT	MODEL 123					MODEL 116					MODEL 107	
	240D	280E	280CE	300D	300CD	300TD	280SE	300SD	450SEL	6.9	450SL	450SLC
Radio	1-30E	1-30E	1-30E	1-30E	1-30E	1-30E	2-10G	2-10G	2-10G	2-10G	3-36H	3-36H
Rear Window Heater	5	5	5	5	5	5	5	5	5	5	3-11E	3-11E
Relays (Solenoids/Valves):												
A/C I	11	—	—	—	—	—	—	—	—	—	—	—
A/C II	11	—	—	—	—	—	—	—	—	—	—	—
A/C Compressor Clutch	11	4	4	4	4	4	4	4	4	4	4	4
A/C Starter	12	13	13	12	12	12	2-6C	2-6C	2-6C	2-6C	3-8C	3-8C
Antenna	7	7	7	7	7	7	7	7	7	7	7	7
Automatic Transmission Solenoid Valve	1-13F	1-13F	1-13F	1-13F	1-13F	1-13F	2-14H	2-14H	2-14H	2-14H	3-15E	3-15E
Auxiliary Fan	11	4	4	4	4	4	4	4	4	4	4	4
Auxiliary Fan Control	—	4	4	—	—	—	4	—	4	4	4	4
Bi-Level Flap Valve	—	4	4	4	4	4	4	4	4	4	4	4
Changeover Valve	—	4	4	—	—	—	4	—	4	4	4	4
Cold Start Valve	—	13	13	—	—	—	2-4E	—	2-4E	2-4E	—	—
Cruise Control Actuator	6	6	6	6	6	6	6	6	6	6	6	6
Defrost	—	4	4	4	4	4	4	4	4	4	4	4
Delay; Rear Window Heater	5	5	5	5	5	5	5	5	5	5	3-11C	3-11C
Dome Lamp Delay	—	—	—	—	—	—	—	—	2-22D	2-22D	—	—
Footwell Flap Valve	—	4	4	4	4	4	4	4	4	4	4	4
Fresh Recirculating Air Flap Valve	—	4	4	4	4	4	4	4	4	4	4	4
Fuel Pump	—	13	13	—	—	—	2-7D	—	2-7D	2-7D	3-5A	3-5A
Ignition Changeover Valve	—	4	4	—	—	—	4	—	4	4	4	4
Switchover Valve	—	—	—	—	—	—	—	2-14C	—	—	—	—
Thermal Time Switch	—	13	13	—	—	—	2-6E	—	2-6E	2-6E	—	—
Window	8	8	8	8	8	8	8	8	8	8	8	8
Resistors:												
Ambient Temperature Sensor	—	4	4	4	4	4	4	4	4	4	4	4
Ballast; .4Ω	—	13	13	—	—	—	2-4F	—	2-4F	2-4F	3-5F	3-5F
Ballast; .6Ω	—	13	13	—	—	—	2-4G	—	2-4G	2-4G	3-5G	3-5G
Blower	11	4	4	4	4	4	4	4	4	4	4	4
Engine Temperature Sensor	12	—	—	12	12	12	—	—	—	—	—	—
Glow Plug	12	—	—	12	12	12	—	—	—	—	—	—
In-Car Temperature Sensor	—	4	4	4	4	4	4	4	4	4	4	4
Instrument Panel Lamp Rheostat	1-14J	1-14J	1-14J	1-14J	1-14J	1-14J	2-25K	2-25K	2-25K	2-25K	3-25J	3-25J
Preglow Indicator Temperature Sender	—	—	—	—	—	—	—	14	—	—	—	—
Seat Belt Warning Unit	1-9G	1-9G	1-9G	1-9G	1-9G	1-9G	2-11L,16E	2-11L,16E	2-11L,16E	2-11L,16E	3-10K,14D	3-10K,14D
Seat Heater; front, left	9	9	9	9	9	9	9	9	9	9	9	9
Seat Heater; front, right	9	9	9	9	9	9	9	9	9	9	9	9
Seat Heater; rear, left	—	—	—	—	—	—	9	9	9	9	—	—
Seat Heater; rear, right	—	—	—	—	—	—	9	9	9	9	—	—

COMPONENT INDEX


COMPONENT	MODEL 123					MODEL 116					MODEL 107	
	240D	280E	280CE	300D	300CD	300TD	280SE	300SD	450SEL	6.9	450SL	450SLC
Speed Sensor	6	6	6	6	6	6	6	6	6	6	6	6
Servo Assembly	—	4	4	4	4	4	4	4	4	4	4	4
Spark Plugs	—	13	13	—	—	—	24K	—	26K	26K	35K	35K
Starter	14C,12	14C,13	14C,13	14C,12	14C,12	14C,12	24C	24C	24C	24C	34C	34C
Switches:												
Antenna Control	7	7	7	7	7	7	7	7	7	7	7	7
Back-Up Lamp/Starter Lockout	1-12D	1-12D	1-12D	1-12D	1-12D	1-12D	2-13G	2-13G	2-13G	2-13G	3-16C	3-16C
Bi-Level Vacuum	—	4	4	4	4	4	4	4	4	4	4	4
Blower Master Vacuum	—	4	4	4	4	4	4	4	4	4	4	4
Blower Motor	11	—	—	—	—	—	—	—	—	—	—	—
Brake Differential Pressure	1-7H	1-7H	1-7H	1-7H	1-7H	1-7H	2-9M	2-9M	2-9M	2-9M	3-12L	3-12L
Brake Fluid	1-8H	1-8H	1-8H	1-8H	1-8H	1-8H	2-10M	2-10M	2-10M	2-10M	3-12L	3-12L
Brake Pad Wear Sensor; front, left	1-9L	1-9L	1-9L	1-9L	1-9L	1-9L	2-12M	2-12M	2-12M	2-12M	3-11L	3-11L
Brake Pad Wear Sensor; front, right	1-9L	1-9L	1-9L	1-9L	1-9L	1-9L	2-12M	2-12M	2-12M	2-12M	3-11L	3-11L
Climate Control Unit	—	4	4	4	4	4	4	4	4	4	4	4
Combination	1-11E,19J, 25F	1-11E,19J, 25F	1-11E,19J, 25F	1-11E,19J, 25F	1-11E,19J, 25F	1-11E,19J, 25F	2-19F,34E	2-19F,34E	2-19F,34E	2-19F,34E	3-20E,22C, 32E	3-20E,22C, 32E
Compressor	—	4	4	4	4	4	4	4	4	4	4	4
Compressor Low Pressure	—	4	4	4	4	4	4	4	4	4	4	4
Compressor On/Off	—	4	4	4	4	4	4	4	4	4	4	4
Compressor Vacuum	—	4	4	4	4	4	4	4	4	4	4	4
Cruise Control	6	6	6	6	6	6	6	6	6	6	6	6
Dimmer (Combination Switch)	1-23F	1-23F	1-23F	1-23F	1-23F	1-23F	2-32E	2-32E	2-32E	2-32E	3-30E	3-30E
Dome Lamp; front	1-12H	1-12H	1-12H	1-12H	1-12H	1-12H	2-21D	2-21D	2-21D	2-21D	3-27D	3-24C
Dome Lamp; rear	1-24C	1-24C	1-24C	1-24C	1-24C	1-24C	2-24C	2-24C	2-24C	2-24C	—	3-23E
Door; front, left	1-10H	1-10H	1-10H	1-10H	1-10H	1-10H	2-16G	2-16G	2-16G	2-16G	3-24F	3-24F
Door; front, right	1-9H	1-9H	1-9H	1-9H	1-9H	1-9H	2-22F	2-22F	2-22F	2-22F	3-25F	3-25F
Door; rear	—	—	—	—	—	1-25D	—	—	—	—	—	—
Door; rear, left	1-23C	1-23C	1-23C	1-23C	1-23C	1-26D	2-24C	2-24C	2-24C	2-24C	—	—
Door; rear, right	1-24C	1-24C	1-24C	1-24C	1-24C	1-26D	2-25C	2-25C	2-25C	2-25C	—	—
Drier Temperature	—	—	—	4	4	4	—	4	—	—	—	—
Driver Belt	1-9H	1-9H	1-9H	1-9H	1-9H	1-9H	2-17D	2-17D	2-17D	2-17D	3-14E	3-14E
Electric Window; console, left	8	8	8	8	8	8	8	8	8	8	8	8
Electric Window; console, right	8	8	8	8	8	8	8	8	8	8	8	8
Electric Window; rear, left	8	8	8	8	8	8	8	8	8	8	8	8
Electric Window; rear, right	8	8	8	8	8	8	8	8	8	8	8	8
Engine Temperature	11	4	4	4	4	4	4	4	4	4	4	4
Evaporating Icing	—	4	4	4	4	4	4	4	4	4	4	4
Fog (Light Switch Assembly)	1-23J	1-23J	1-23J	1-23J	1-23J	1-23J	2-31H	2-31H	2-31H	2-31H	3-30J	3-30J
Glove Box Lamp	1-31F	1-31F	1-31F	1-31F	1-31F	1-31F	2-11H	2-11H	2-11H	2-11H	3-36H	3-36H


COMPONENT INDEX


COMPONENT	MODEL 123					MODEL 116				MODEL 107		
	240D	280E	280CE	300D	300CD	300TD	280SE	300SD	450SEL	6.9	450SL	450SLC
Switches (con't):												
Hazard/Flasher	1-17H	1-17H	1-17H	1-17H	1-17H	1-17H	—	—	—	—	3-20D	3-20D
Hazard Warning	—	—	—	—	—	—	2-18E	2-18E	2-18E	2-18E	—	—
Heated Rear Window	5	5	5	5	5	5	5	5	5	5	3-11C	3-11C
Horn (Combination Switch Assembly)	1-11E	1-11E	1-11E	1-11E	1-11E	1-11E	2-36E	2-36E	2-36E	2-36E	3-22C	3-22C
Ignition	1-7B, 21C, 28B	1-7B, 21C, 28B	1-7B, 21C, 28B	1-7B, 21C, 28B	1-7B, 21C, 28B	1-7B, 21C, 28B	2-7B, 10E, 30C	2-7B, 10E, 30C	2-7B, 10E, 30C	2-7B, 10E, 30C	3-9B, 27B, 30C	3-9B, 27B, 30C
Intake Manifold Pressure	—	—	—	—	—	—	—	2-13D	—	—	—	—
Kickdown	1-13D	1-13D	1-13D	1-13D	1-13D	1-13D	2-14G	2-14G	2-14G	2-14G	3-15D	3-15D
Level Control	—	—	—	—	—	—	—	—	—	2-13M	—	—
Light	1-21D, 23J	1-21D, 23J	1-21D, 23J	1-21D, 23J	1-21D, 23J	1-21D, 23J	2-30D, 31H	2-30D, 31H	2-30D, 31H	2-30D, 31H	3-26H, 28C, 30J	3-26H, 28C, 30J
Parking Brake	1-8H	1-8H	1-8H	1-8H	1-8H	1-8H	2-10M	2-10M	2-10M	2-10M	3-13L	3-13L
Reading Lamp; left	—	—	—	—	—	—	2-25E	2-25E	2-25E	2-25E	—	—
Reading Lamp; right	—	—	—	—	—	—	2-23E	2-23E	2-23E	2-23E	—	—
Receiver Drier Temperature	11	—	—	—	—	—	—	—	—	—	—	—
Refrigerant Loss	11	—	—	—	—	—	—	—	—	—	—	—
Refrigerant Temperature	—	4	—	4	—	—	4	—	4	4	4	4
Seat Heater Control; front, left	9	9	9	9	9	9	9	9	9	9	9	9
Seat Heater Control; front, right	9	9	9	9	9	9	9	9	9	9	9	9
Seat Heater Control; rear, left	—	—	—	—	—	—	9	9	9	9	—	—
Seat Heater Control; rear, right	—	—	—	—	—	—	9	9	9	9	—	—
Sensor Plate Safety	—	13	13	—	—	—	2-8E	—	2-8E	2-8E	3-6B	3-6B
Sliding Roof	10	10	10	10	10	10	10	10	10	10	—	10
Starter Lockout/ (Back-Up Lamp)	12	13	13	12	12	12	2-6D	2-6D	2-6D	2-6D	3-8C	3-8C
Stop Lamp	1-14D	1-14D	1-14D	1-14D	1-14D	1-14D	2-12G	2-12G	2-12G	2-12G	3-17C	3-17C
Suspension Pressure Sensor	—	—	—	—	—	—	—	—	—	—	—	—
Temperature Vacuum	11	—	—	—	—	—	—	—	—	—	—	—
Thermal Time	12	13	13	12	12	12	—	—	—	—	—	—
Transmission Pressure	—	—	—	—	—	—	—	—	—	—	3-8E	3-8E
Trunk Lamp	1-19C	1-19C	1-19C	1-19C	1-19C	1-19C	2-13E	—	—	—	—	—
Turn Signal (Combination Switch Assembly)	1-19J	1-19J	1-19J	1-19J	1-19J	1-19J	2-25E	2-25E	2-25E	2-25E	3-22E	3-22E
Warning Buzzer Contact	1-9E	1-9E	1-9E	1-9E	1-9E	1-9E	2-19F	2-19F	2-19F	2-19F	3-20E	3-20E
Washer (Combination Switch Assembly)	1-27F	1-27F	1-27F	1-27F	1-27F	1-27F	2-36E	2-36E	2-36E	2-36E	3-13B	3-13B
Water Pump Temperature	—	4	4	4	4	4	4	4	4	4	3-34E	3-34E
Windshield Wiper (Combination Sw. Assembly)	1-26F	1-26F	1-26F	1-26F	1-26F	1-26F	2-35E	2-35E	2-35E	2-35E	3-33E	3-33E
Wiper/Washer; rear door	—	—	—	—	—	1-30H	—	—	—	—	—	—
Tachometer	—	—	—	—	—	—	2-15K	2-15K	2-15K	2-15K	3-18J	3-18J
TDC Sensor	—	13	13	—	—	—	2-5H	2-5H	2-5H	2-5H	3-6H	3-6H
TDC Sensor Adapter	—	—	—	—	—	—	—	2-7H	—	—	—	—
Temperature Gauge	1-14J	1-14J	1-14J	1-14J	1-14J	1-14J	2-15K	2-15K	2-15K	2-15K	3-13J	3-13J
Thermal Time Switch	—	13	13	—	—	—	2-6E	—	2-6E	2-6E	—	—
Transistorized Ignition Switching Unit	—	13	13	—	—	—	2-6F	—	2-6F	2-6F	3-7F	3-7F


GROUND TERM. NO.	COMPONENT	FIG. NO. LOCATION	CAR LOCATION
T1	A/C Compressor Clutch	4	Under hood; left top front.
	Fog Lamp; left	3-30M	
	Headlamp; high, left	3-31M	
	Headlamp; high/low, left	3-31M	
	Marker Lamp; left front	3-31M	
	Parking Lamp; left front	3-31M	
	Refrigerant Temperature Switch	4	
	Turn Signal Lamp; left front	3-19H	
	Auxiliary Fan Motor	4	
	Auxiliary Water Pump	4	
T2	Blower Motor	4	Under hood; right top front.
	Fog Lamp; right	3-30M	
	Footwell Flap Valve	4	
	Headlamp; high, right	3-32M	
	Headlamp; high/low; right	3-32M	
	Heating Coil	3-5C	
	Marker Lamp; right front	3-32M	
	Parking Lamp; right front	3-32M	
	Servo Assembly	4	
	Turn Signal Lamp; right front	3-21H	
T3	Windshield Washer Motor	3-34G	Inside car, behind dash; left of steering column.
	Auxiliary Fan Control Relay	4	
	Bi-Level Flap Valve	4	
	Brake Fluid Level Switch	3-12L	
	Brake Wear Sensor; left	3-11M	
	Brake Wear Sensor; right	3-11M	
	Cigar Lighter Assembly	3-35K	
	Climate Control Amplifier	4	
	Console Switch Assembly; left	8	
	Console Switch Assembly; right	8	
	Cruise Control Amplifier	6	
	Defrost Relay	4	
	Delay Relay	3-12D	
	Dome Lamp; front (Mod. 450SLC)	3-24D	
	Door Switch; left	3-24G	
	Door Switch; right	3-25G	
	Fresh Recirculating Air Flap Valve	4	
	Glove Box Lamp Switch	3-35K	
	Hazard/Flasher Timer Assembly	3-19E	
	Horn Switch	3-22D	
T4	Ignition Changeover Valve	4	Under hood; right top front.
	Instrument Panel	3-21K	
	Interval Wiper Control	3-34J	
	Panel Lamps, Climate Control	3-21E	
	Parking Brake Switch	3-13L	
	Rear Window Heater Switch (Mod. 450SLC)	3-12D	

GROUND TERM. NO.	COMPONENT	FIG. NO. LOCATION	CAR LOCATION
T3 (cont.)	Seat Heater Controls	9	
	Sensor Plate Safety Switch	3-6C	
	Sliding Roof Switch (Mod. 450SLC)	10	
	Starter Lockout Switch	3-8D	
	Warning Device, Seat Belt	3-14E	
	Window Relay	8	
	Windshield Wiper Motor	3-32M	
T4	Gear Shift Lamp	3-27J	Inside car, in center console.
	Radio	3-37J	
T5	Battery	3-3D	Inside trunk right side, on trunk floor.
T6	Antenna Motor & Relay Assembly	7	Inside trunk left rear; below tail lamp assy.
	Back-Up Lamp; left	3-15E	
	Marker Lamp; left rear	3-25M	
	Stop Lamp; left	3-16E	
	Tail Lamp; left	3-25M	
	Turn Signal Lamp; left rear	3-19H	
	Back-Up Lamp; right	3-16E	
T7	Fuel Pump	3-5C	Inside trunk, right side, behind fuel tank bulkhead.
	Marker Lamp; right rear	3-26M	
	Rear Window Heater	3-11E	
	Stop Lamp; right	3-17E	
	Tail Lamp; right	3-26M	
	Turn Signal Lamp; right rear	3-20H	
	Diagnostic Plug, pin 2	3-5G	
T13			Under hood on Ignition Coil bracket

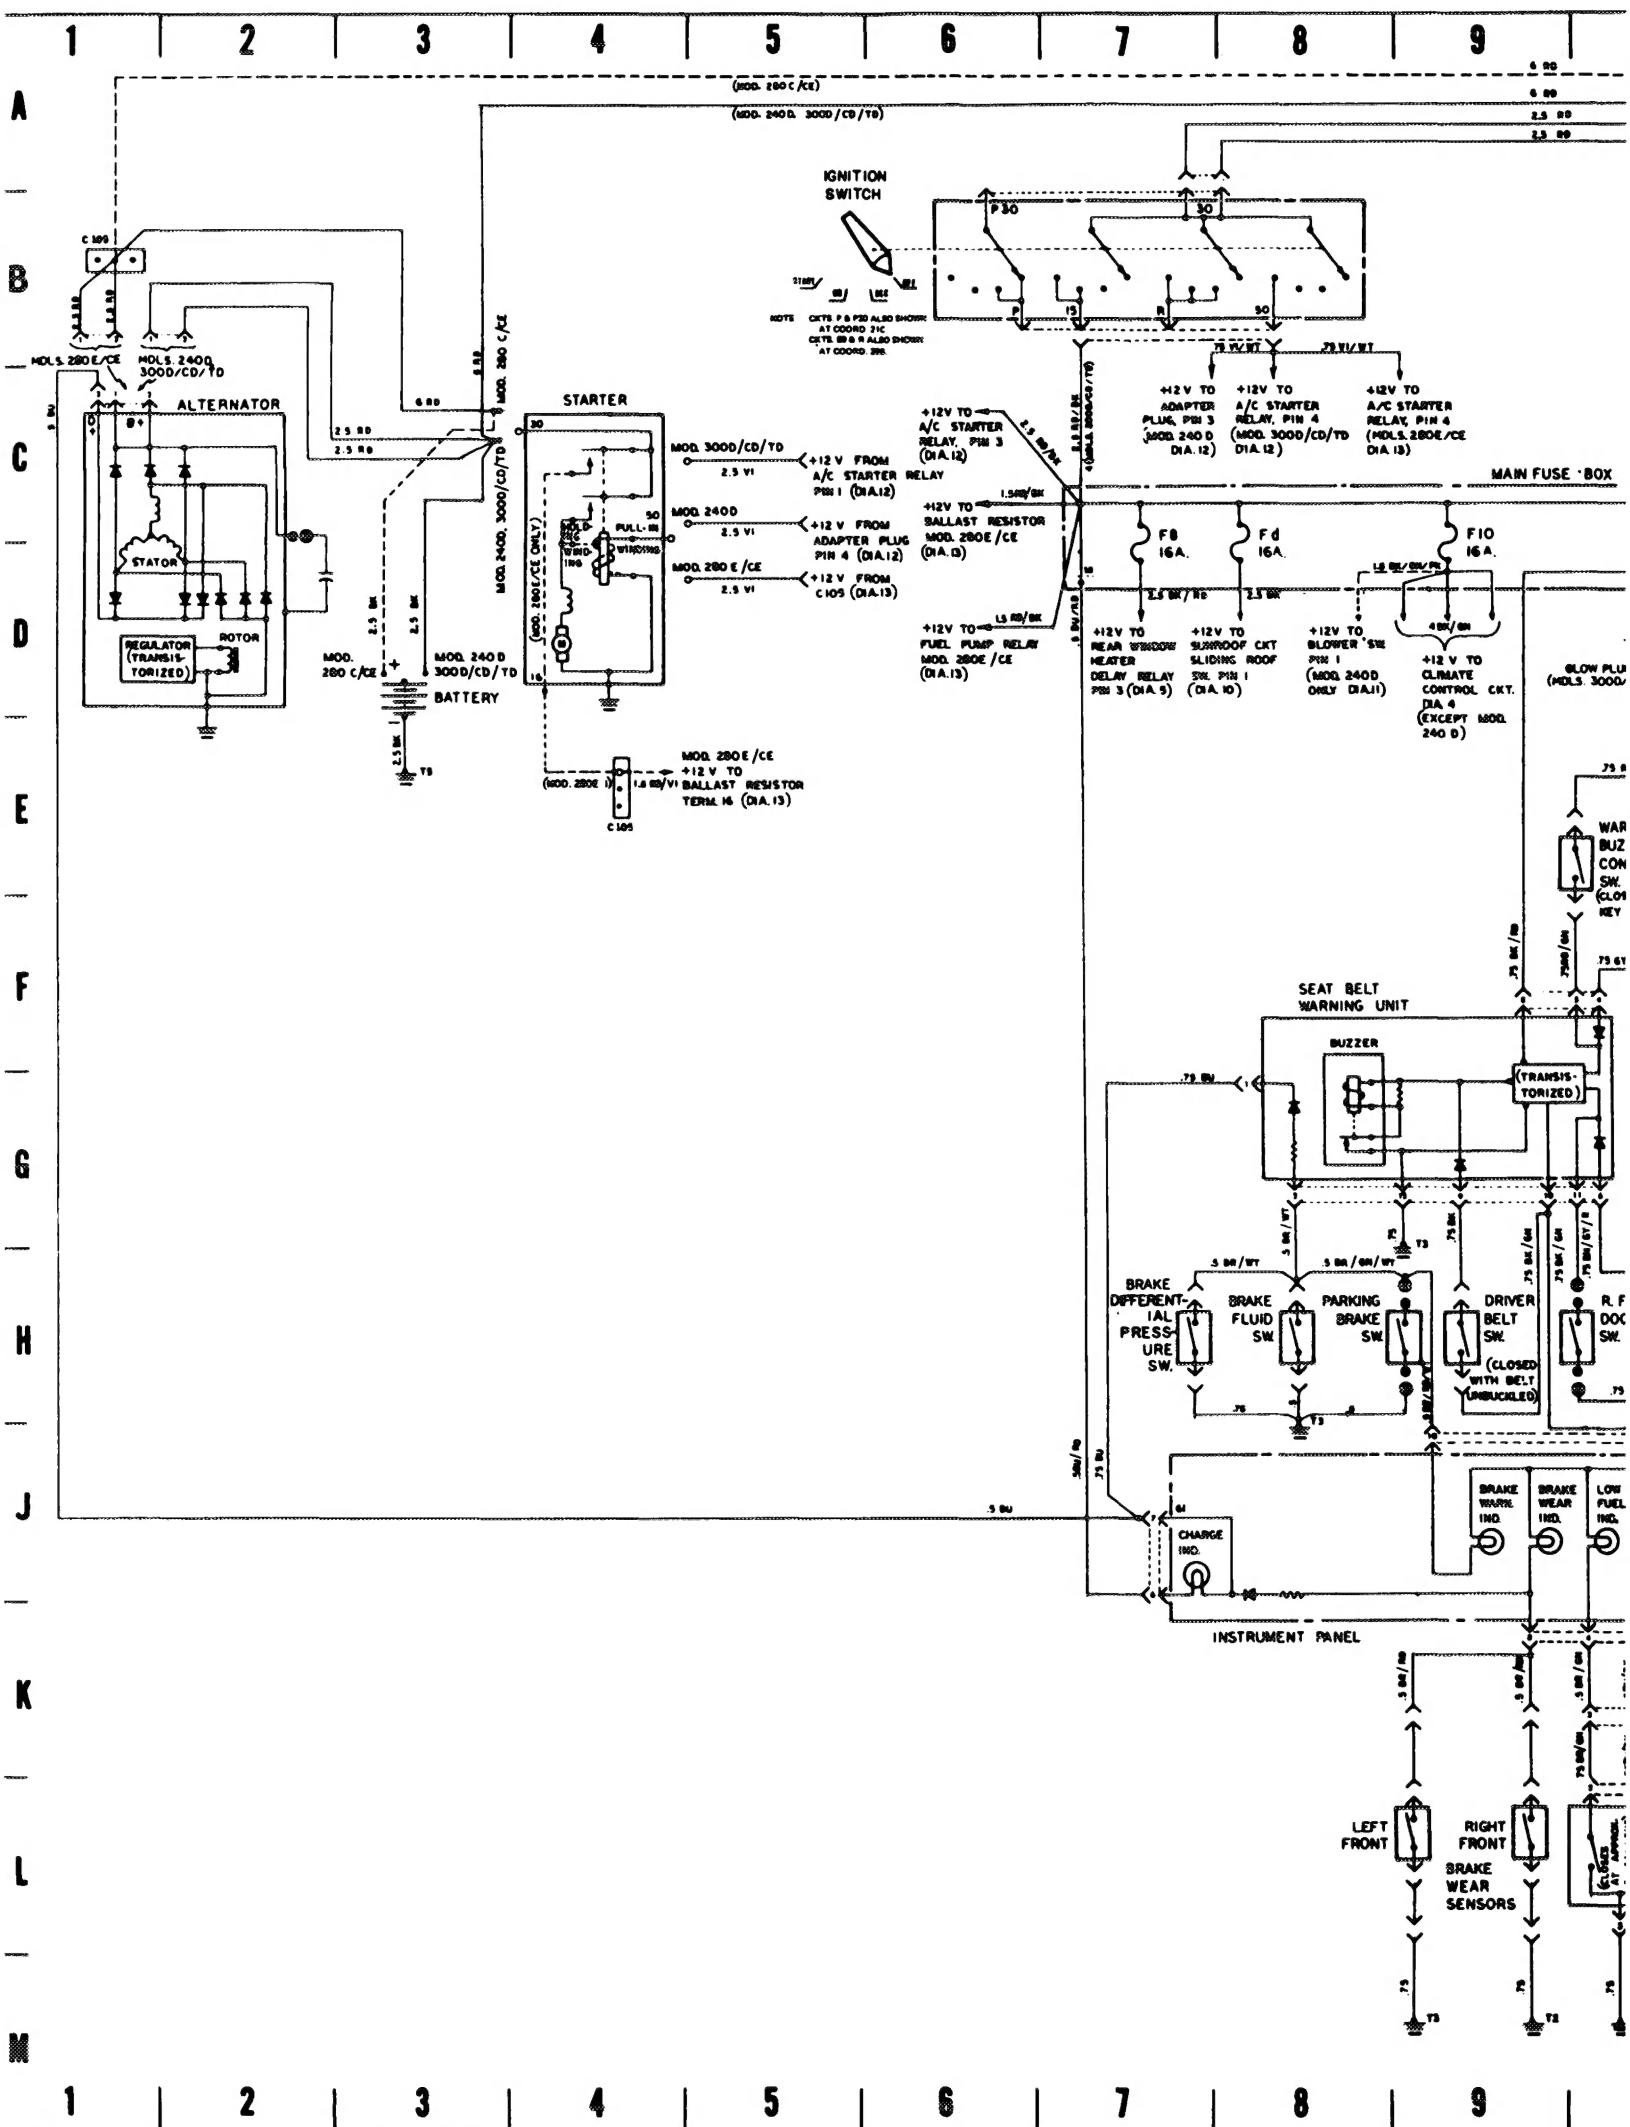

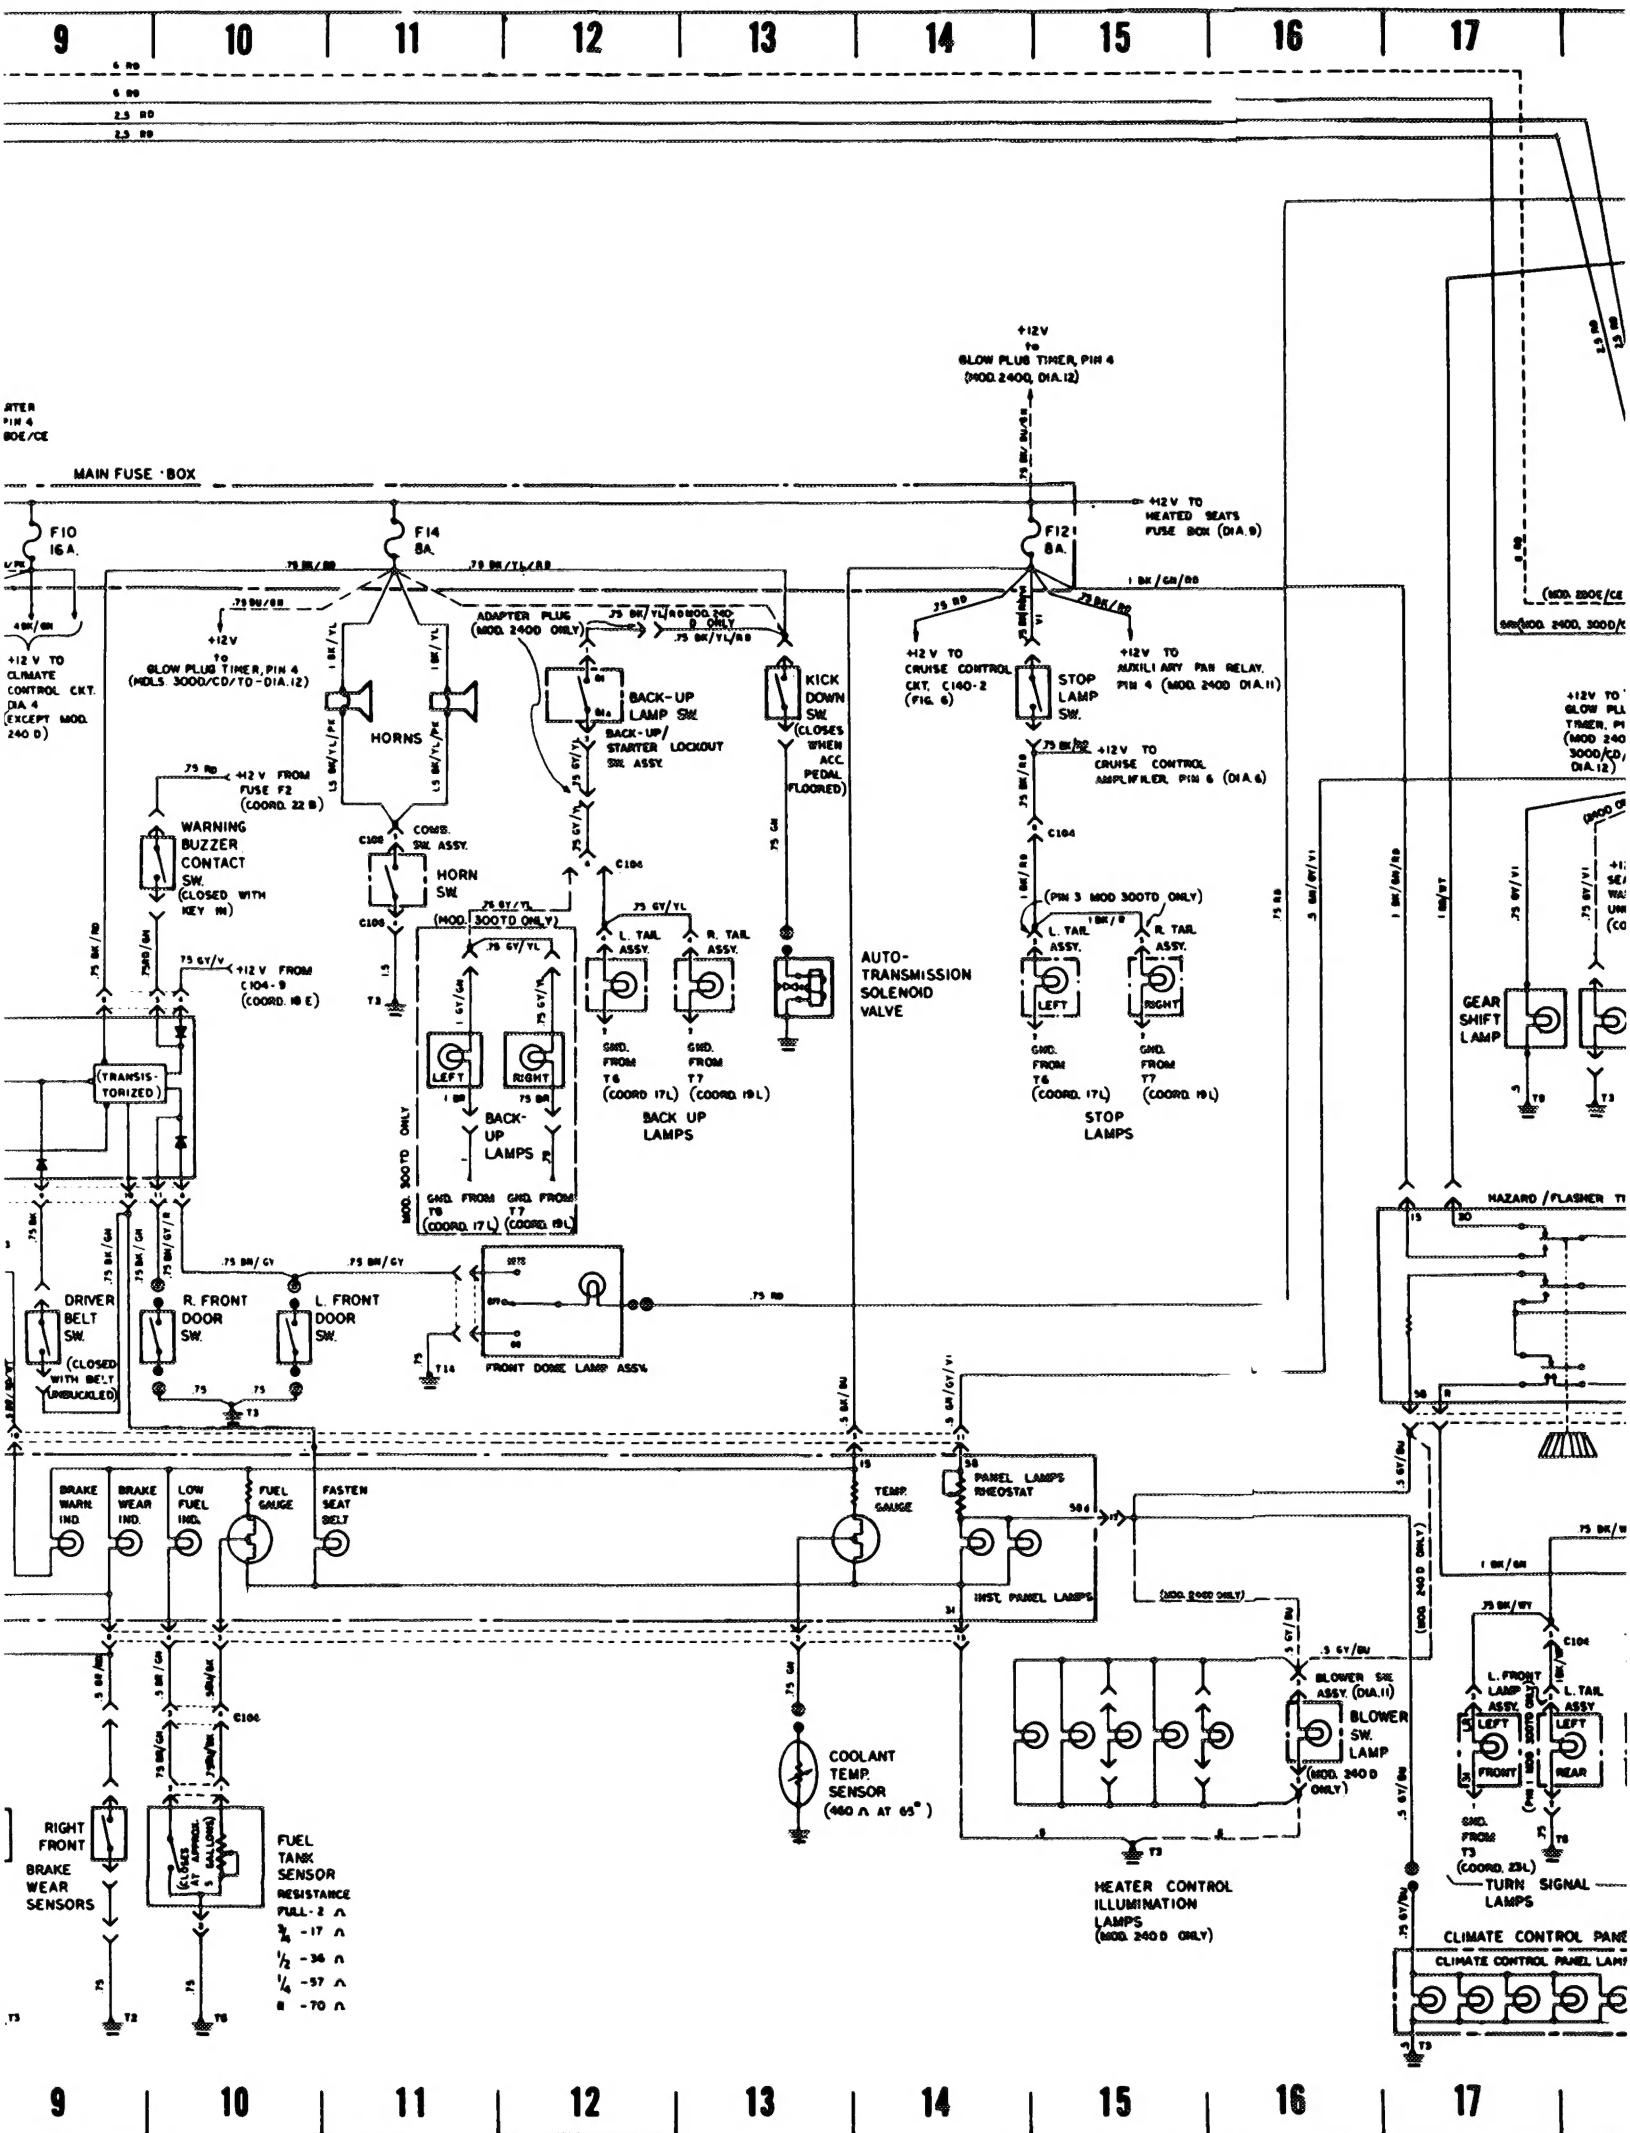


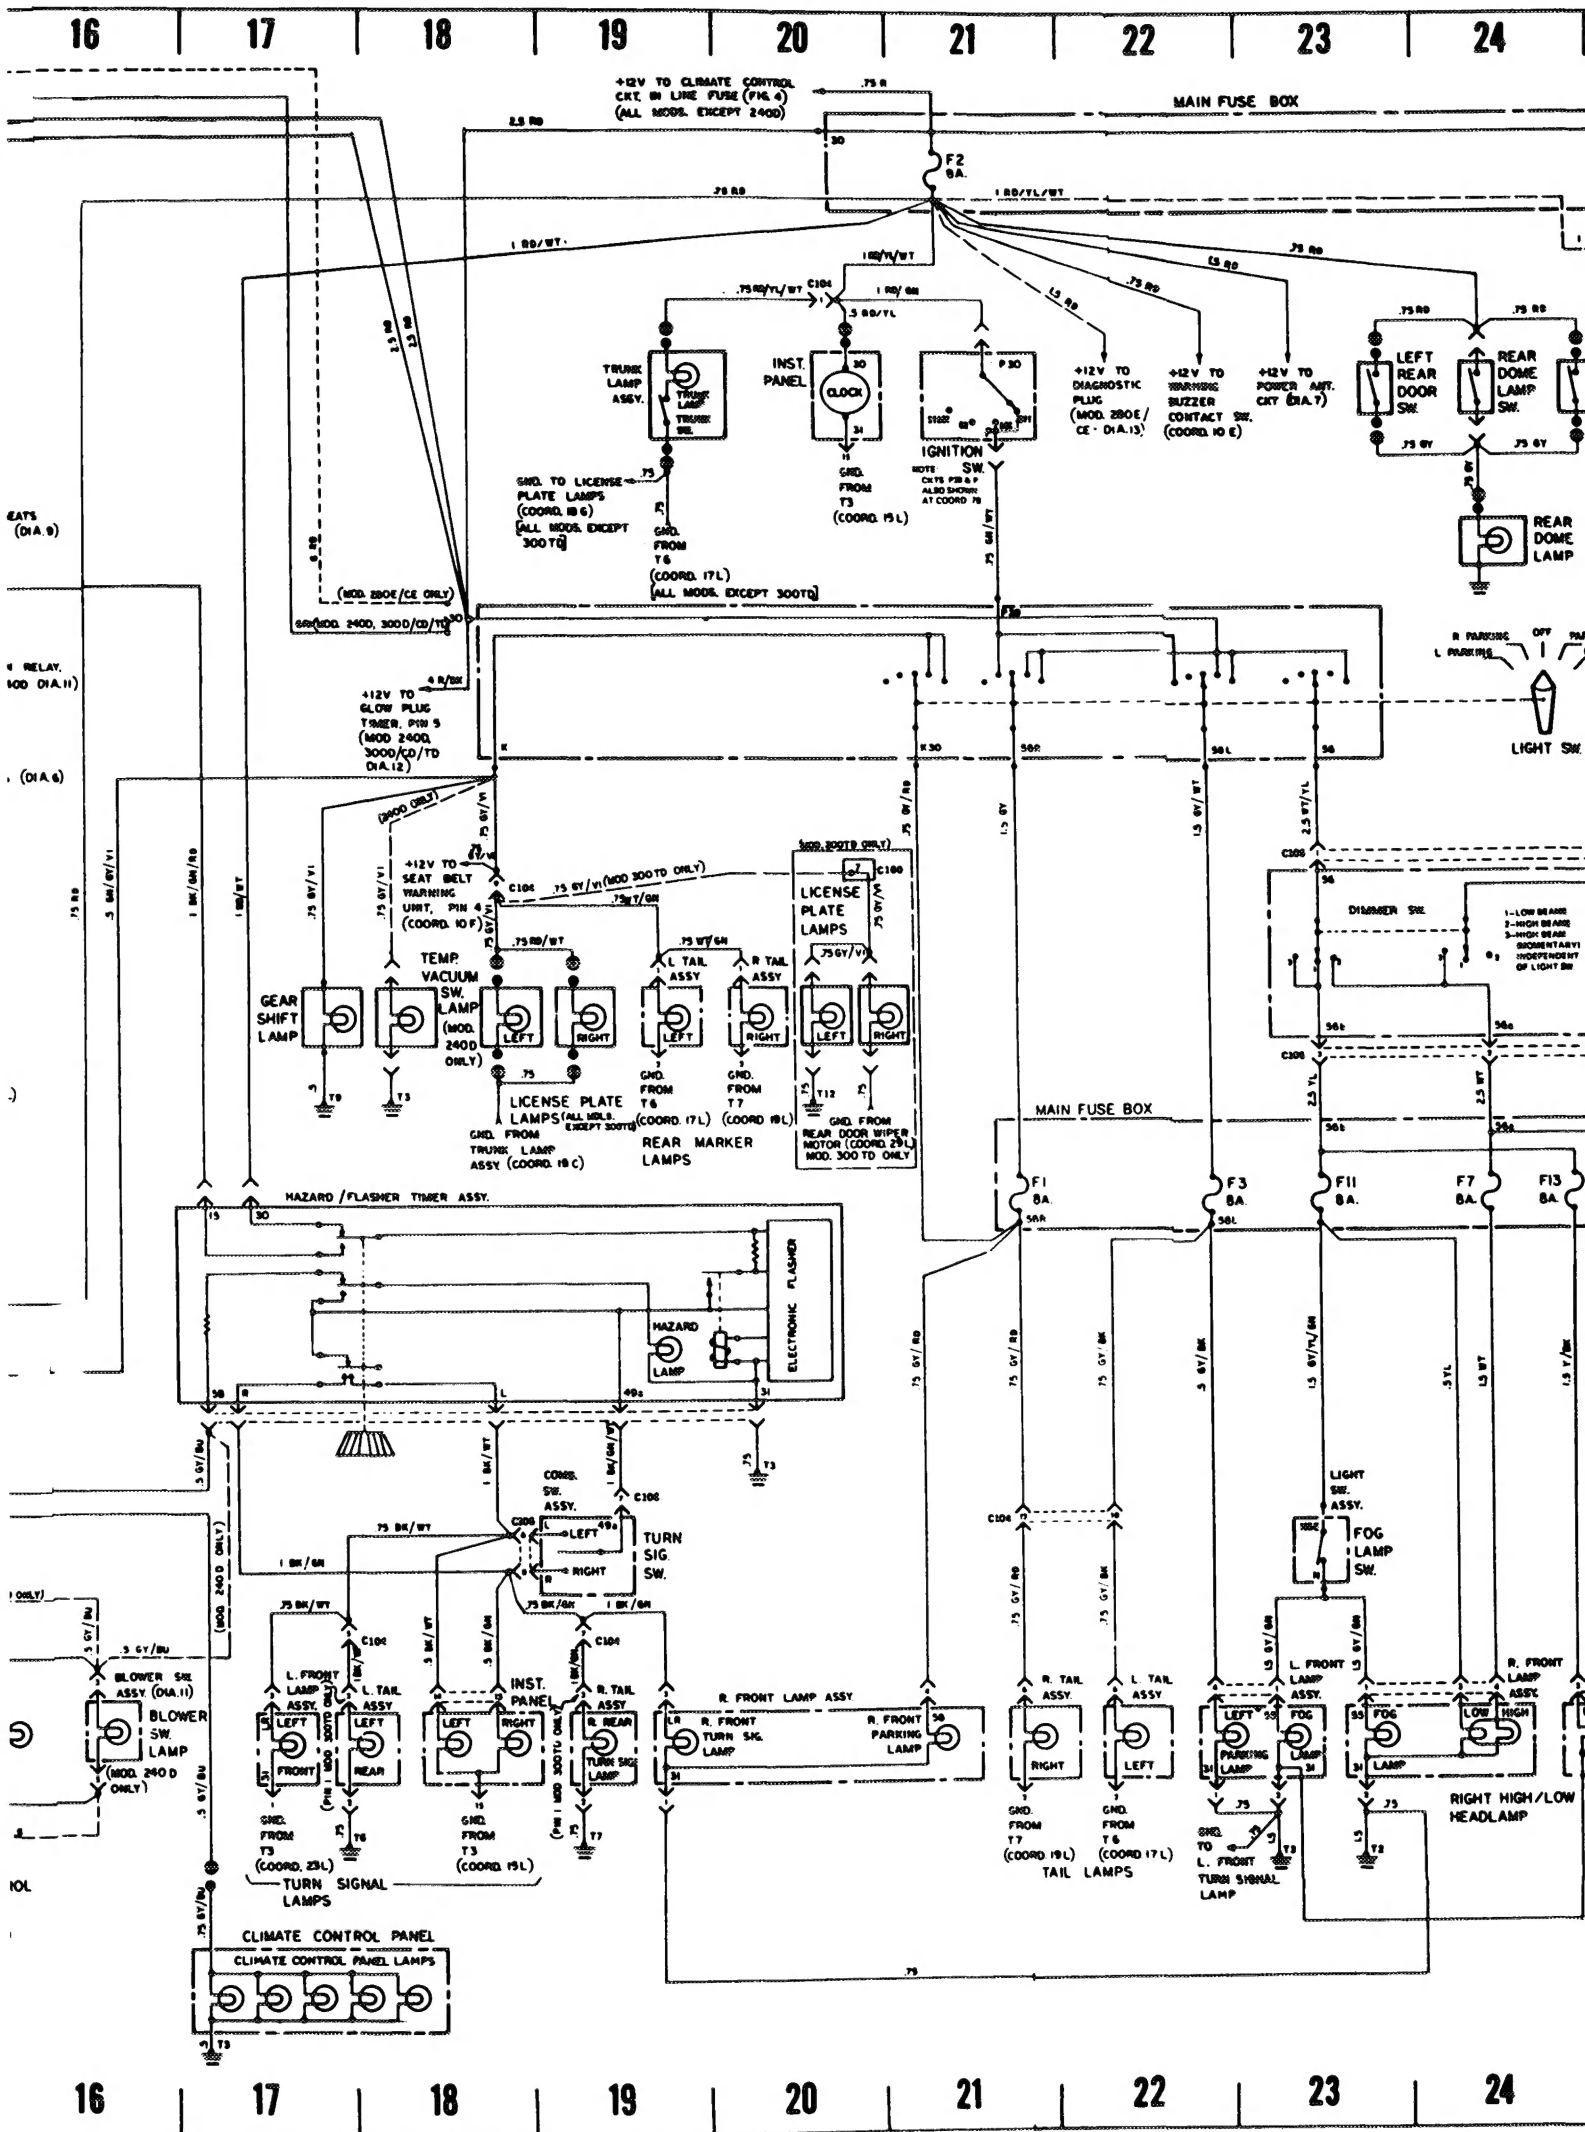


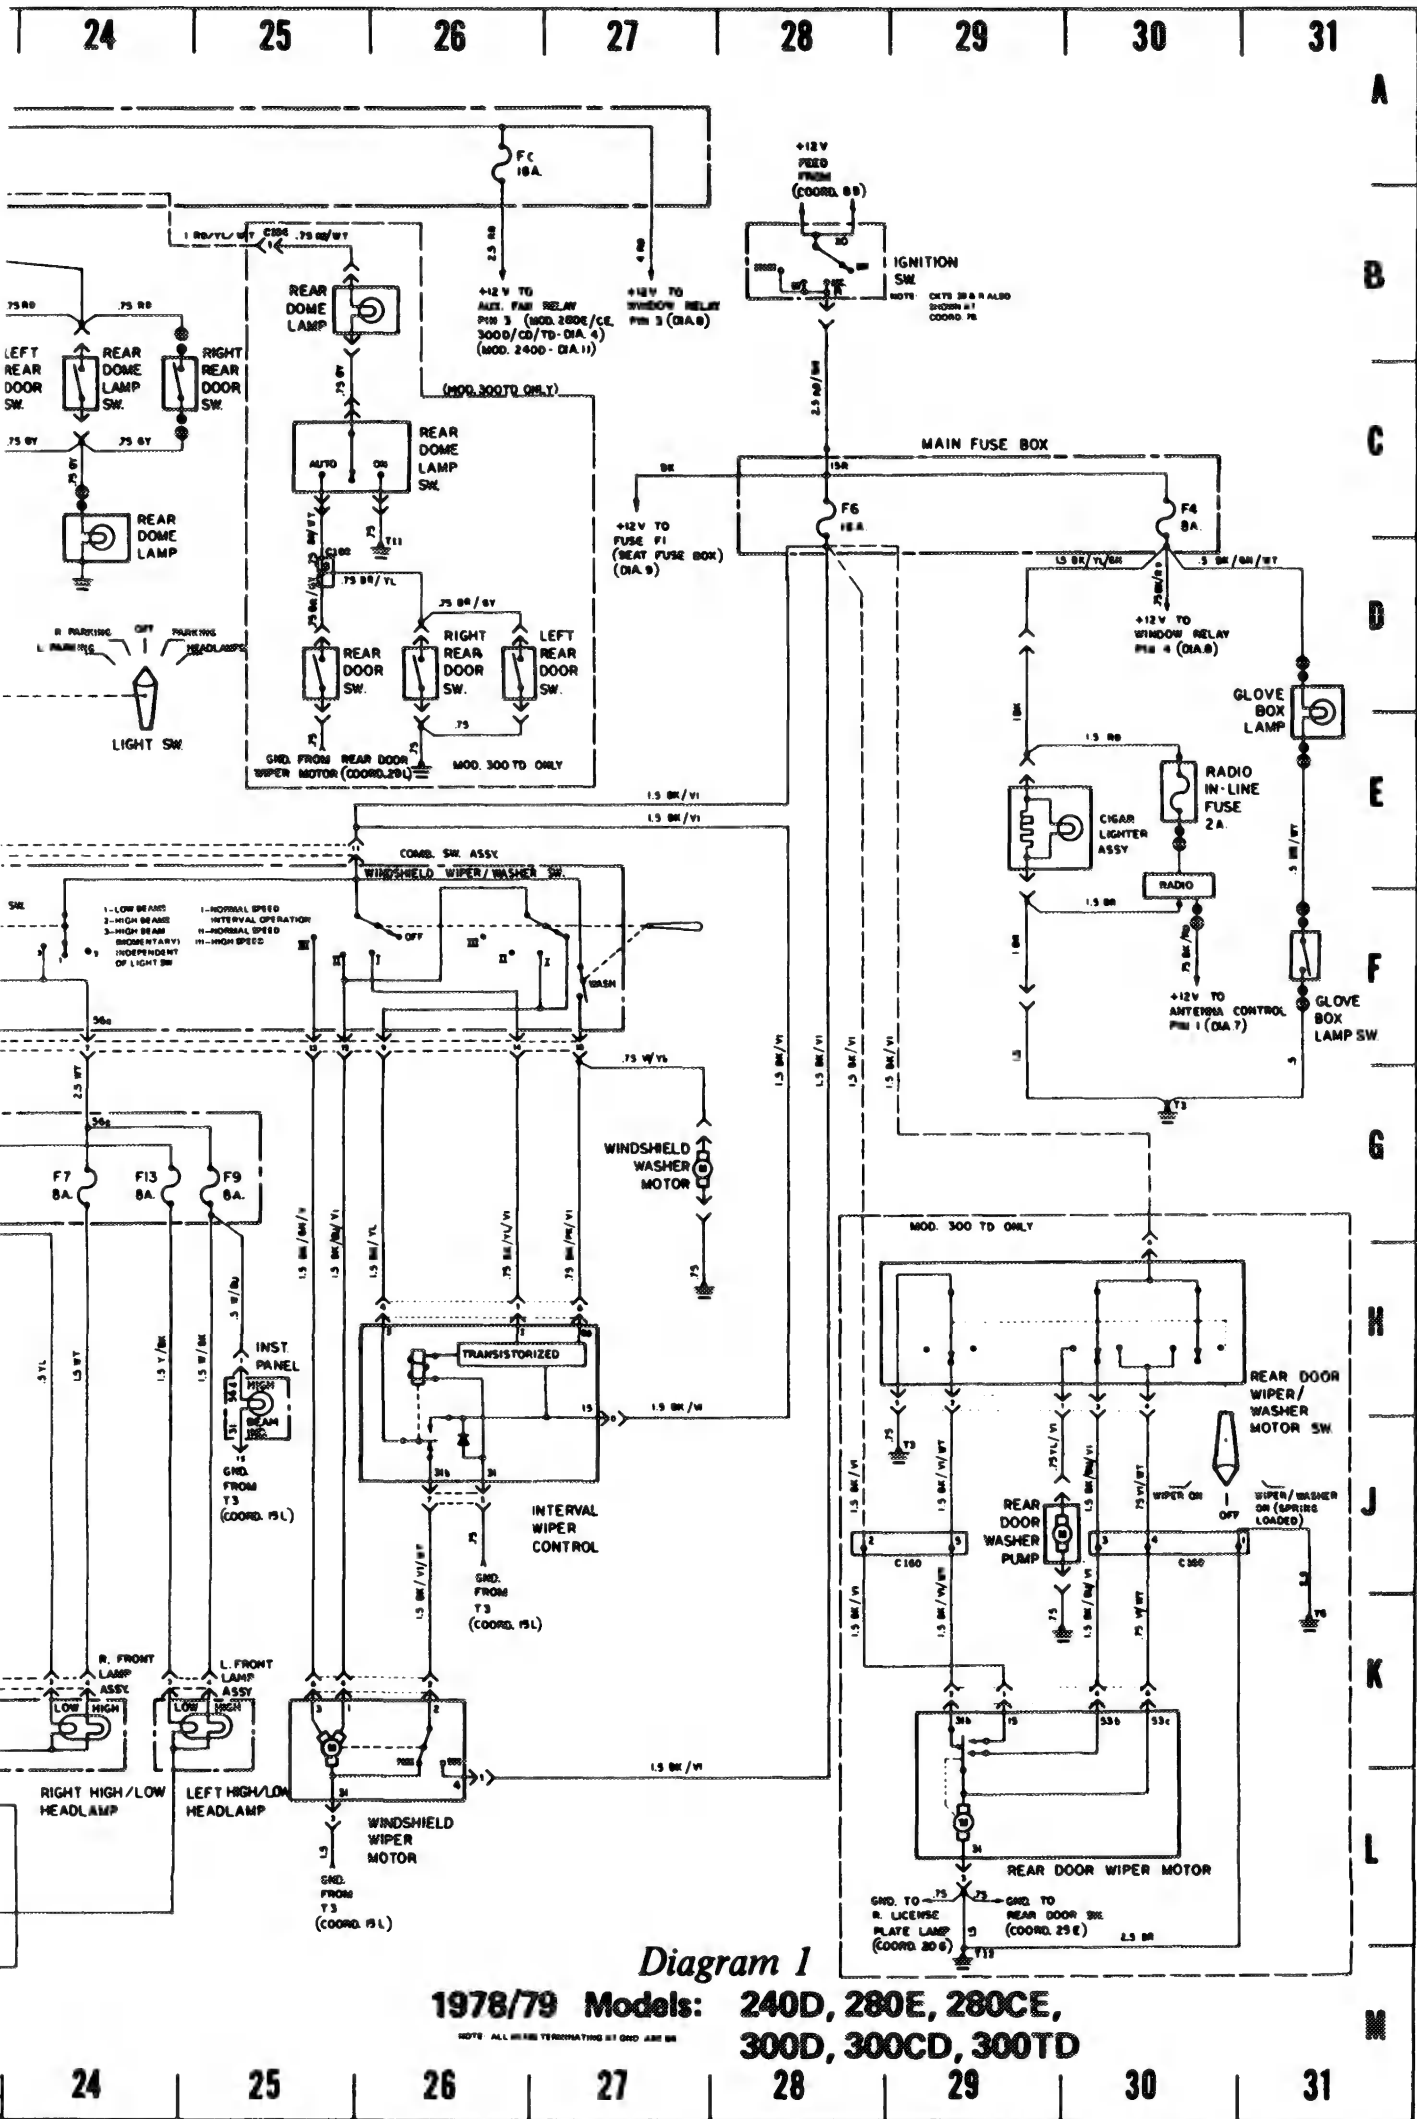

MDLS. 240D, 280E/CE,
300D/CD/TD
(DIA. 1 - COORD. 7D)

MDLS. 280SE, 300SD,
450SEL, 6.9
(DIA. 2 - COORD. 10C)

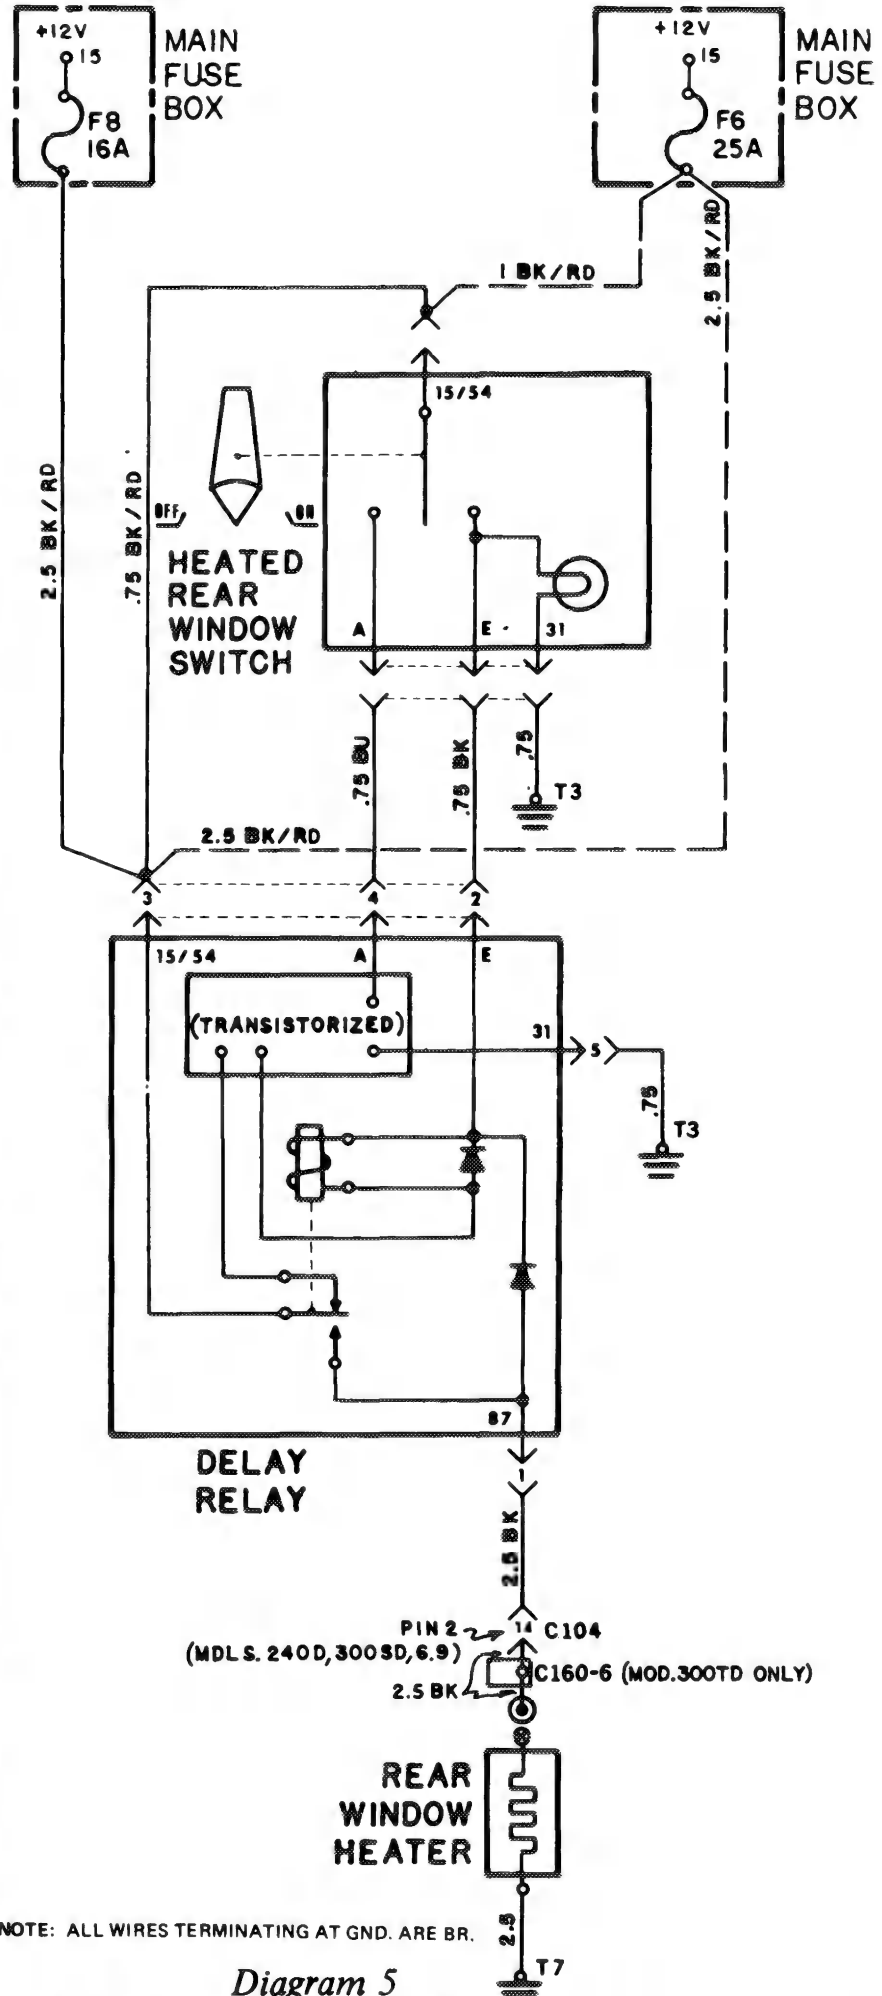

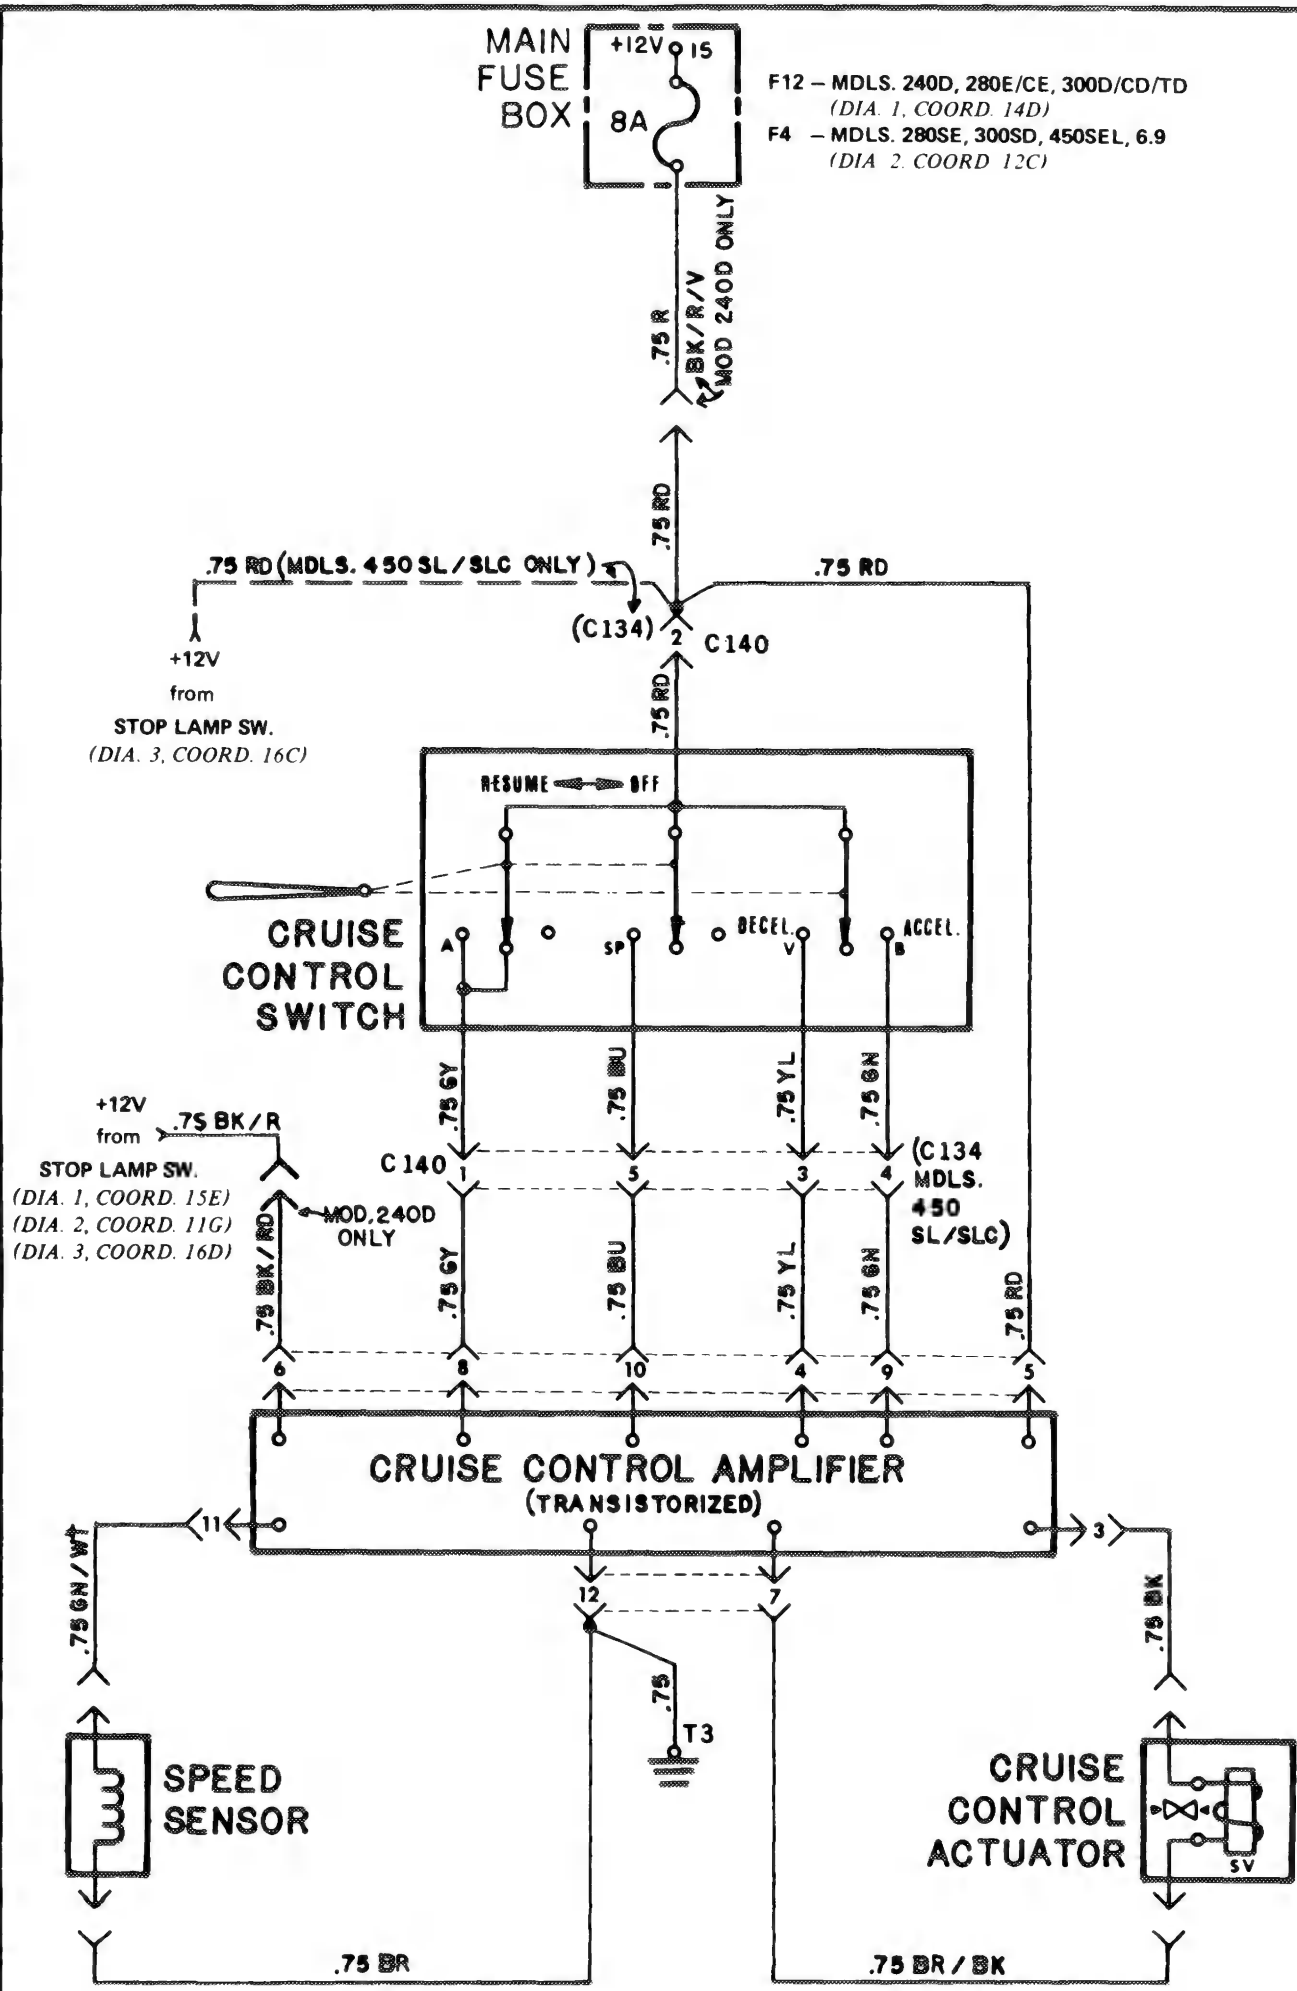

NOTE: ALL WIRES TERMINATING AT GND. ARE BR.

Diagram 6
1978/79 CRUISE CONTROL

MDLS. 240D, 280E/CE, 300D/CD/TD

(DIA. 1-COORD. 30F)

MDLS. 280SE, 300SD, 450SEL, 6.9

(DIA. 2-COORD. 10G)

MDLS. 450SL/SLC

(DIA. 3-COORD. 37H)

MDLS. 280SE, 300SD, 450SEL, 6.9


+12V

from

C135-1

(DIA. 2-COORD. 26C)


FUSE BOX

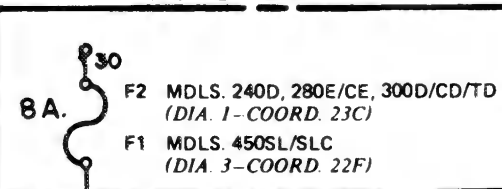


RADIO

.75 BU/GY

*NOTE: MOMENTARY POSITIONS

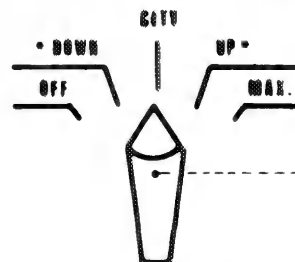


ANTENNA
CONTROL
SWITCH

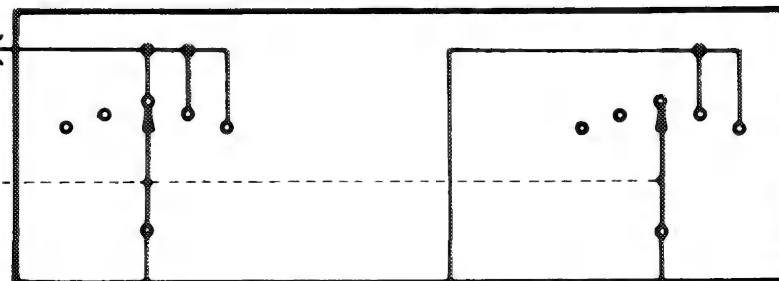

ANTENNA
MOTOR
& RELAY
ASSEMBLY

.75 BU/GY
C135

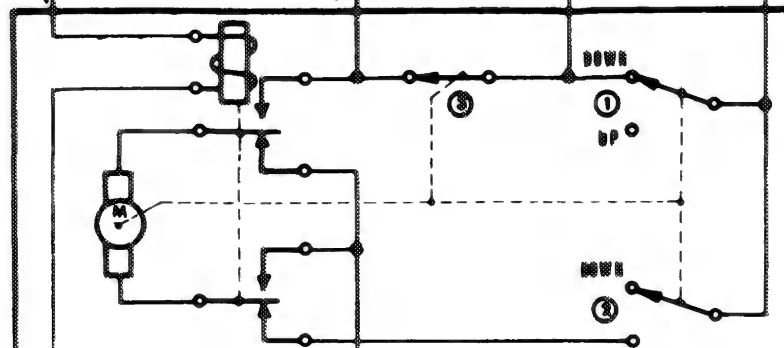

C104

1.5 RD

1.5 RD

C104
(MODELS 450 SEL/SL/SLC,
/ 6.9 ONLY)

1.5 RD

1.5 RD


1.5 RD

DOWN

UP

DOWN

•NOTE: MOMENTARY POSITIONS

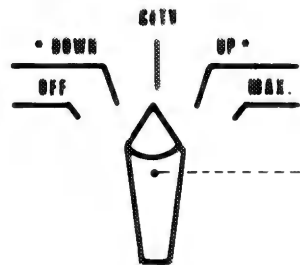

ANTENNA
CONTROL
SWITCH

ANTENNA
MOTOR
& RELAY
ASSEMBLY

7.5 BU/GY

C135

C135

T6

1.5 BU

1.5 BK

1.5 BK

1.5 BK

1.5 RD


1.5 RD

C104
(MODELS 450 SEL/SL/SLC,
6.8 ONLY)

Diagram 7
1978/79 POWER ANTENNA

NOTE: ALL W'RES TERMINATING AT GND. ARE BR.


MAIN FUSE BOX

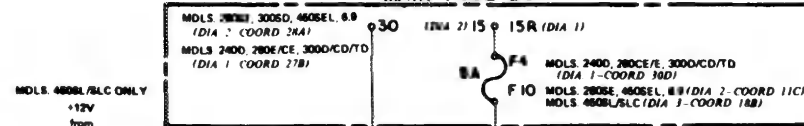

MDLS 4605EL/SLC ONLY
+12V
from
C106
(DIA 3 COORD 3C)

4 RD (MDLS 4605EL/SLC ONLY)

WINDOW RELAY

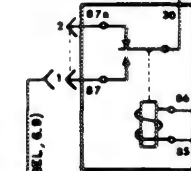


4 RD (MDLS 4605EL, 4605EL)

MOD. 3005D ONLY
+12V
from
IGNITION SW. TERM R
(DIA 2 COORD 18E)

.75 BK/VI (MOD. 3005D ONLY)

75 T3


MAIN FUSE BOX

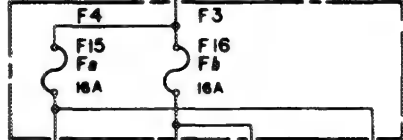

NOTE: FUSES F3 & F4 : MDLS 4605EL/SLC (DIA 1)
FUSES F15 & F16 : MDLS 2805E, 3005D, 4605EL, 4605EL (DIA 2)
FUSES F6 & F8 : MDLS 2400, 2800CE/E, 3000/CD/TD (DIA 1)


C107

CONSOLE SWITCH ASSEMBLY

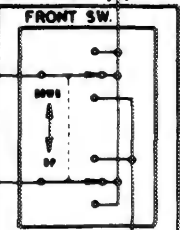


RIGHT FRONT WINDOW MOTOR


CONSOLE SWITCH ASSEMBLY

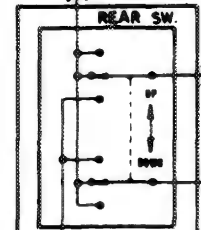


LEFT REAR WINDOW SWITCH

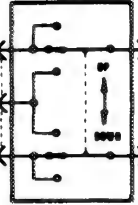

LEFT REAR WINDOW MOTOR

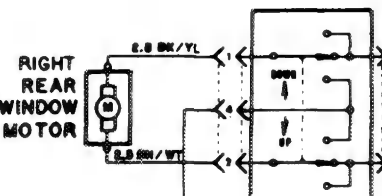

RIGHT REAR WINDOW MOTOR

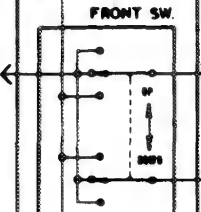


LEFT FRONT WINDOW MOTOR



1978/79 HEATED SEATS

NOTE: REAR SEAT HEATERS AVAILABLE IN MODELS 280SE, 300SD, 440SEL, & 6.9 ONLY.

MAIN FUSE BOX

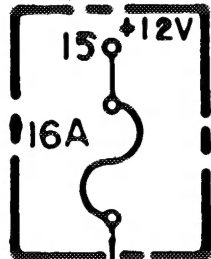

- Fd — MDLS. 240D, 280E/CE, 300D/CD (DIA. 1-COORD. 8D)
- F10 — MDLS. 280SE, 300SD, 450SEL, 6.9 (DIA. 2-COORD. 11C)
- F5 — MDL. 450SLC (DIA. 3-COORD. 21B)


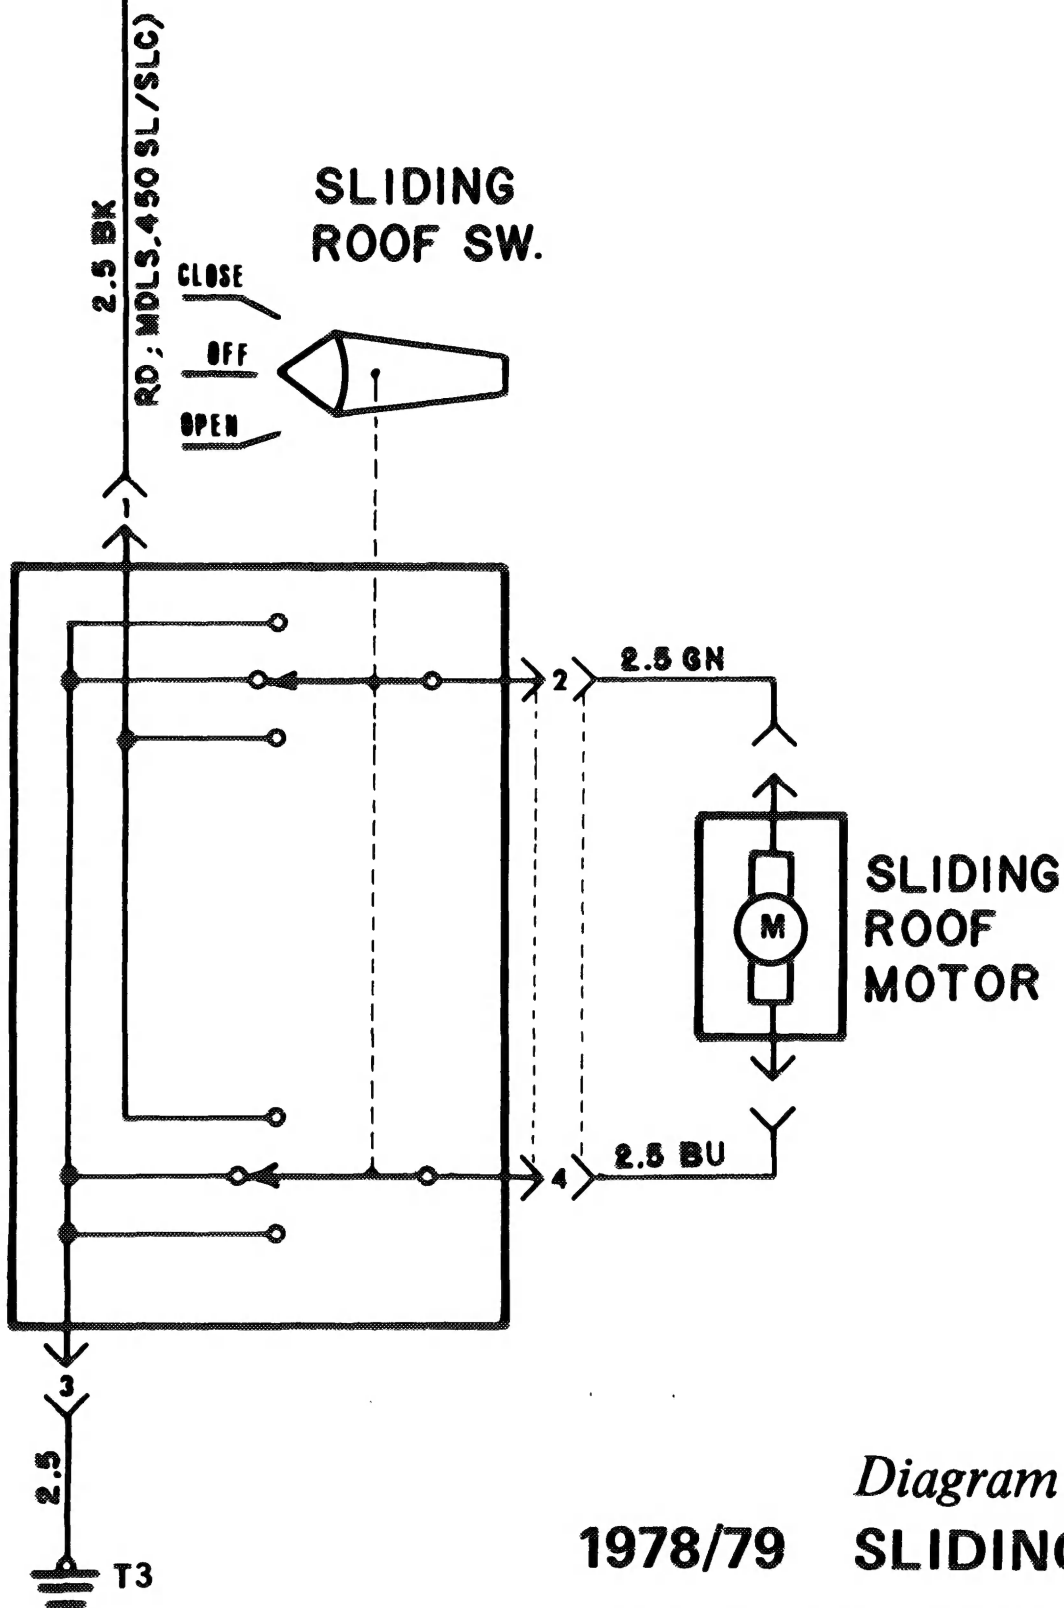


Diagram 10
1978/79 SLIDING ROOF

NOTE: ALL WIRES TERMINATING AT GND. ARE BR.



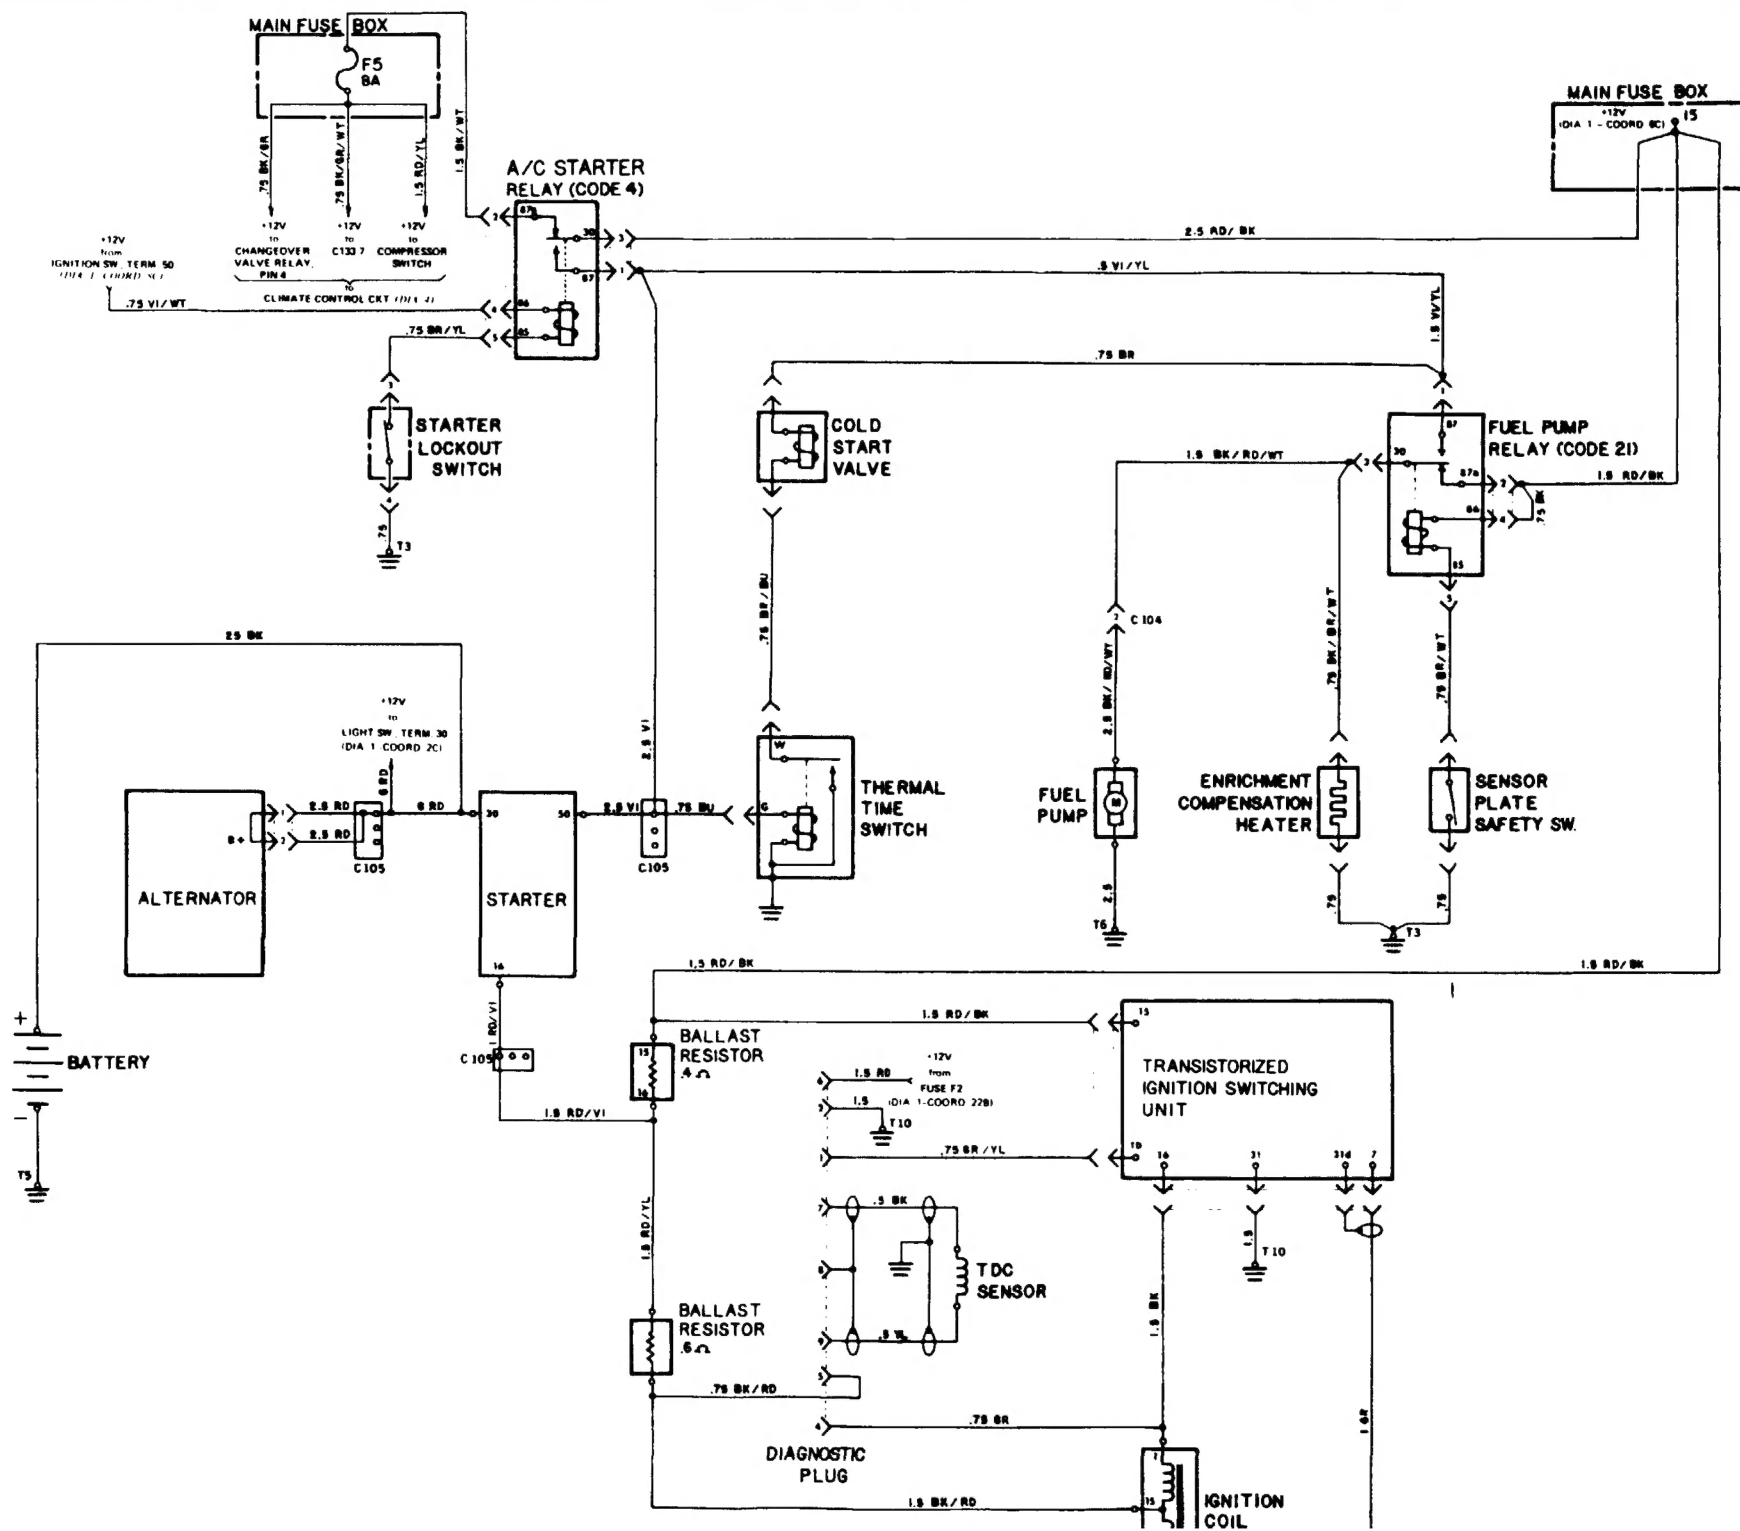

NOTE ALL WIRES TERMINATING AT GND ARE BR